

10/17/00
jc944 U.S. PTO

10-18-00
A
In the United States Patent and Trademark Office

Mailed 199 OCT 16, 2000

Box Patent Application
Assistant Commissioner for Patents
Washington, District of Columbia 20231

Sir:

Please file the following enclosed patent application papers:

Applicant #1, Name: THOMAS C. THOMPSON

Applicant #2, Name: _____

Title: HURRICANE & STORM PROTECTION FOR large windows & doors

☒ Specification, Claims, and Abstract: Nr. of Sheets 32

☒ Declaration: Date Signed: OCT 16, 2000

☒ Drawing(s): Nr. of Sheets Enc.: Formal: 27 Informal: _____

☒ Small Entity Declaration of Inventor(s) ☐ SED of Non-Inventor / Assignee / Licensee

☐ Assignment enclosed with cover sheet and recordal fee; please record and return.

☒ Check for \$ 355.⁰⁰ for:

☐ \$ 355.⁰⁰ for filing fee (not more than three independent claims and twenty total claims are presented).

☐ \$ _____ additional if Assignment is enclosed for recordal.

PD 6,131,354

☐ Disclosure Document Program reference letter.

☐ Pursuant to 35 U.S.C. §119(e)(i), applicant(s) claim priority of ~~Provisional~~ Patent Application Ser. Nr. 09/032,560
filed 2/27/98.

☒ Return Receipt Postcard Addressed to Applicant #1.

☒ Request Under MPEP § 707.07(i): The undersigned, a pro se applicant, respectfully requests that if the Examiner finds patentable subject matter disclosed in this application, but feels that Applicant's present claims are not entirely suitable, the Examiner draft one or more allowable claims for applicant.

Very respectfully,

Thomas C. Thompson

Applicant #1 Signature

Applicant #2 Signature

92-543 KOKOLE PL

Address (Send Correspondence Here)

Address

MAKAICILLO HI 96707

Express Mail Label #

EF101275843 US

Date of Deposit 199 OCT 16, 2000

I hereby certify that this paper or fee is being deposited with the United States Postal Service using "Express Mail Post Office to Addressee" service under 37 CFR 1.10 on the date indicated above and is addressed to "Box Patent Application, Assistant Commissioner for Patents, Washington, DC 20231."

Signed: Thomas Thompson

Inventor

In the United States Patent and Trademark Office

Mailed 199 OCT 16, 2000

Box Patent Application
Assistant Commissioner for Patents
Washington, District of Columbia 20231

Fee Transmittal

First-Named Applicant THOMAS C. THOMPSON
Title of Invention: " HURRICANE & STORM Protection for Large windows & doors
Total Payment Enclosed (From Calculation Below): \$ \$355.00 ☒ Check ☐ Money Order

Sir:

Enclosed is the following small entity filing fee for the above patent application:

Fee Code	Fee Description	Fee (\$)
214	Provisional Pat. Appn. Filing Fee	
201	Basic Utility Appn. Filing Fee	<u>\$1 355.00</u>
206	Basic Design Appn. Filing Fee	
	Subtotal (1)	
203	Total Claims: <u>7</u> - 20 = <u> </u> ; X <u> </u> (fee for each claim over 20) = <u>7</u>	
202	Tot. Indep. Claims <u>1</u> - 3 = <u> </u> ; X <u> </u> (fee for each indep. claim over 3) = <u>1</u>	
	Subtotal (2)	
Total Payment Enclosed [Sum of Subtotals (1) and (2)]		

Very respectfully,

Thomas C. Thompson
Signature of First-Named Applicant
THOMAS C. THOMPSON
Print Name of First-Named Applicant
92-543 KOKOLE PL
Address
MAKAKILO, HAWAII
96707

Patent Application of
Thomas C. Thompson, 92-543 Kokole Pl. Makakilo, HI 96707
for

HURRICANE AND STORM PROTECTION FOR LARGE WINDOWS AND DOORS

Background-Field of Invention

This is a Divisional of Application # 09/032,560, filed 02/27/98. The invention relates to a shutter, fastener, and locking mechanism that provides an easy to install means of protecting large door and window openings from hurricanes, strong winds, rain, wind-blown debris, and vandals.

Background-Description of Prior Art

Background

Studies of damage from Hurricanes Hugo, Andrew, and Iniki show that most of the damage to a home was from the wind or wind-borne missiles that broke a window and let rain and wind into the home. Once the wind was inside a home, the resulting pressure helped lift the roof off the house. Shutters can help keep the wind and rain from entering a home during strong winds.

During Hurricane warnings, plywood is usually nailed over windows and patio doors to prevent wind-driven rain and debris from breaking the window and entering the house. Nailing sheets of plywood over windows is difficult on many homes, and it could take too much time to secure a cover over each window. Strong winds can rip down nailed-up plywood; and roll-down shutters and louvered shutters are also ineffective (Fine Homebuilding, 1992).

Homeowners are usually reluctant to drive nails into their window frames or do not want to be on a ladder during high winds. An individual can not hold up a large, heavy piece of plywood and nail it in at the same time. When a hurricane is expected, often the building suppliers run out of plywood.

Plywood nailed to a window frame can be blown out of a building due to the high pressure inside a building compared to the low pressure outside during high winds. This is due to the Bernoulli effects, where wind blowing around and over a building causes lower pressure than the high pressure air inside, and sucks out a window, wall, or roof.

Patent Application of
Thomas C. Thompson, 92-543 Kokole Pl. Makakilo, HI 96707
for

HURRICANE AND STORM PROTECTION FOR LARGE WINDOWS AND DOORS
Background-Field of Invention

The invention relates to prior application #08/597,194, and consists of a shutter, fastener, and locking mechanism that provides an easy to install means of protecting large door and window openings from hurricanes, strong winds, rain, wind-blown debris, and vandals.

Background-Description of Prior Art

Background

Studies of damage from Hurricanes Hugo, Andrew, and Iniki show that most of the damage to a home was from the wind or wind-borne missiles that broke a window and let rain and wind into the home. Once the wind was inside a home, the resulting pressure helped lift the roof off the house. Shutters can help keep the wind and rain from entering a home during strong winds.

During Hurricane warnings, plywood is usually nailed over windows and patio doors to prevent wind-driven rain and debris from breaking the window and entering the house. Nailing sheets of plywood over windows is difficult on many homes, and it could take too much time to secure a cover over each window. Strong winds can rip down nailed-up plywood; and roll-down shutters and louvered shutters are also ineffective (Fine Homebuilding, 1992).

Homeowners are usually reluctant to drive nails into their window frames or do not want to be on a ladder during high winds. An individual can not hold up a large, heavy piece of plywood and nail it in at the same time. When a hurricane is expected, often the building suppliers run out of plywood.

Plywood nailed to a window frame can be blown out of a building due to the high pressure inside a building compared to the low pressure outside during high winds. This is due to the Bernoulli effects, where wind blowing around and over a building causes lower pressure than the high pressure air inside, and sucks out a window, wall, or roof.

An airplane rises due to the pressure differential of faster air moving over a wing, compared to the high pressure of slower moving air under a wing. So too does the side walls blow out of a house due to the Bernoulli effects of wind blowing perpendicular to the wall. Gable ends blow out of a house, because of higher pressure in the house compared to the extremely low pressure on the leeward edge of the wind direction.

Once the window, side wall, or gable end of a house is blown out, the rigidity of the roof and entire house is compromised due to wind getting into the house. Driven rain, along with the wind can damage everything in the house, along with damaging the structural integrity of the roof and walls of the house.

Previously, homeowners thought that they could prevent their walls from being blown out by opening windows to relieve the high pressure on the leeward and sides of a house, but the open windows on the windward side let in wind and rain. If windows are open on the leeward side only, the wind can rapidly change direction and blow into the windows. The wind must go somewhere, and would blow out the walls or roof as it sought a way out. The resulting damage negates any advantage of trying to ease the pressure differential.

This invention is simple to install, economical, and can fit on a wide variety of houses.

The current fad of testing shutters is by shooting a 2x4 into the shutter to test its strength. This simulates a roof rafter being blown into the shutter from a neighbor's house. My previous patent application #08/191,852 helps keep the rafter and roof on a house, and would prevent many of these missiles.

The factual odds of a 2x4 being blown head-on into a window shutter is minuscule. Actually, a 2x4 fired headed-on into a building would go through most wood-frame and concrete-block walls. Studies after Hurricane Andrew show that the most common projectile was roof shingles and roof tiles; and when roof tiles go airborne, they damage neighboring buildings (Miller, 1992).

One advantage of this invention is that any type of covering

can be used for the shutter. Plywood was used in the past because it was readily available, strong, inexpensive, easy to store, and could be cut to fit windows by most homeowners using simple tools. The major problem was with the installation.

No one wanted to be on a ladder during windy conditions, especially trying to hold the heavy plywood sheet with one hand and trying to hammer a nail with the other. That leaves no hands to hold the nail or hold on to the ladder--an unsafe situation.

Plywood can still be used as the shutter material for this invention, but steel and other stronger, lighter, and cheaper materials can be used including new materials as they become available. Researchers testing shutter material claim that thin steel walls are more effective at stopping hurricane debris than thick wood, and the most effective material was 22-gauge steel backed with a thin layer of rubber (Civil Engineering, 1994).

This is good information, but thin sheets of steel with rubber are not readily available to a homeowner. Nevertheless, if it was obtainable, it could be used as the shutter material for this invention.

When thin sheets of steel are corrugated, pleated, or formed into parallel ridges, the resulting shutter cover is stronger than flat steel. Bending the sheets of steel work-hardens it and strengthens the bends. Corrugated metal sheets, used as a shutter cover, are stronger than steel with rubber, and could withstand larger and faster wind-blown missiles. Standard corrugated steel sheets may be used with this invention as a shutter cover, but this invention includes a unique corrugated metal shutter.

Other materials can also be used for the cover such as sheets of aluminum, which are light, recyclable, strong, non-rusting, and relatively easy to cut with power equipment. Kevlar®, fiberglass, rubber sheets, or any strong, lightweight material could also be used for the cover.

Bamboo has recently been used as flooring because it is attractive, wears well, and can be sanded and refinished. Bamboo can be weaved, is flexible and can bend, and can have resins

added to make a product as strong as fiberglass. Unlike timber, bamboo is a plentiful grass that regenerates itself quickly from existing root systems after being cut. Bamboo forests are not clear-cut, but are maintained by harvesting mature stalks which makes room for new shoots to grow (Home Mechanix, 1995). In the tropics, bamboo would make a good cover for a shutter and would be environmentally attractive.

Shutters should be bolted to a building (Fine Homebuilding, 1992). During Hurricane Andrew, 3/4-in. plywood bolted over a window sustained several hits from tree limbs, but nothing came through (Fine Homebuilding, 1992). Even with modern weather forecasting, there would not be enough time to bolt plywood to each window of a house. This invention has brackets permanently attached to the framing members of a house for quick and easy positioning of a shutter with companion hardware.

Concrete-block houses

In Florida, most of the homes are made of concrete-block walls. The window and patio frames are not set flush with the outside wall, but are set part-way into the thick walls. Many of the window frames and patio doors are made of aluminum alloy and may not be secured correctly to the concrete-block.

To fit into the window opening, a sheet of plywood would have to be cut very accurately. Plywood boards stored for use during a hurricane could warp in the humid climate that is prevalent in Florida, and would not fit into the window opening without alterations.

Sometimes there is only a thin part of the window frame exposed in the window well opening. It is very difficult to nail or screw a sheet of plywood into the narrow exposed part of the window frame. Caulking may be set next to the window well and window frame, and there may be voids next to some window frames. Nails in caulk or voids would not form a secure fastening for the plywood board.

In a concrete-block wall, the window frame is not a structural member of the wall and does not provide any load of

the roof, hence it is not very strong. This invention does not attach to the weak window frame of a concrete-block home, but instead attaches to the wall itself. Since the wall has about equal strength around the window, this invention can be mounted on the sides and bottom of the window.

By being attached to the concrete block outside the window well, the plywood sheet does not have to be cut accurately. Even if the board warped, it would still fit over the window well opening and keep out wind and rain. Only small brackets are permanently attached to the cinder block wall and they can be painted to match the wall.

Wood-frame buildings

In many areas along the East and Gulf Coasts, outside of Florida, and in Hawaii, many of the homes are built of wood. There are two major types of wood-frame houses: platform or stud wall construction, and post-and-beam construction.

In platform framing, the wall sections consist of studs that support the roof or second floor. Wood framing around a window or door opening consists of headers and trimmers which are usually double (or more) the thickness of the wall framing. This extra framing helps provide structural rigidity to the wall, where the wall studs are missing from the window or door area.

On wood-framed houses, the window is sometimes flush with the outside sheathing, but may extend out beyond the sheathing and be framed with wood trim. The header board above the window provides a strong attaching point to affix the hinge plate of this invention. Doors would have similar construction framing and a patio door (sliding-glass) and garage door would have stronger headers and trimmers.

In Hawaii and the Caribbean, many of the homes are built using post-and-beam construction. One of the chief structural advantages of this type of construction is the simplicity of framing around door and window openings.

Since the roof loads are carried by fewer, but stronger timbers, large openings can be framed without the need for

headers. Wide window walls are formed by merely inserting window frames between the posts and beams.

Some windows are fixed or non-opening windows which provide daylight and a view of the outdoors. Jalousie windows are also common in tropical areas because they provide excellent ventilation. Both windows are weak against wind and rain, and must be protected by shutters during high winds.

Some houses in Hawaii and the Caribbean have jalousie wood louvers under large non-opening windows that provide ventilation. Shutters are also needed on these louvers to protect them from strong winds, and prevent wind and rain from entering the house.

On post-and-beam houses, the window frame is commonly extended out beyond the outside sheathing and framed with wood trim pieces. The beam above the window provides a strong anchor point for the locks of this invention. The bottom and side frame of the window, which attaches to the posts, forms a strong attaching point for the latching mechanism.

Description of prior art

A number of shutter systems are presently marketed to homeowners that are permanently attached to the house. Some of these shutters roll down over a window from an attached compartment, and some are screwed in. Many homeowners dislike prior shutters for many reasons, but mostly because they are complicated, heavy, unreliable, expensive, take a lot of time to deploy, take tools to deploy, or do not match the color and architecture of the house.

Several recent types of shutter systems have been patented including 4,248,022 (1981) to Walker, 4,333,271 (1982) to De Paolo et al, 4,384,436 (1983) to Green, 5,228,238 (1993) to Fenkell, 5,335,452 (1994) to Taylor, 5,345,716 (1994) to Caplan, 5,347,775 (1994) to Santos, and 5,383,315 (1995) to Birs.

All are good inventions, but they are not inexpensive, they are not simple, they contain complex hardware, they cannot be installed quickly, they cannot fit wood, concrete-block, and masonry houses, they cannot be installed on the top, bottom, or

side of a window, they cannot use different types and thicknesses of material for the shutter, they cannot be installed on the inside of a house, some are too thick to be stored easily, and the hardware is bulky and unattractive on a house.

Objects and Advantages

Objects of this invention are to easily, quickly, and economically protect windows, doors, and houses from the destructive winds of hurricanes. It is a further object of this invention that the shutters will not be permanently attached to the house, except for modest plates.

Another objective is to make the installation procedure simple, so that a handy homeowner can install the shutter hardware. A further object is that this invention can be used on various size window and door openings, and various types of houses. Another objective is the shutter can be made out of any material including plywood, steel, corrugated steel, aluminum, bamboo, kevlar®, fiberglass, rubber sheets, or any strong, lightweight material.

A still further object is for the invention to be retro-fit onto new and old homes made of wood, concrete-block, or masonry. Another object is for the shutters to be installed on patio doors, such as in multi-story apartment houses, where they cannot be reached from the outside.

Another object is to retain the shutter cover over the window and door to prevent vandalism after a hurricane has passed. Further objects and advantages of my invention will become apparent from a consideration of the drawings and ensuing description.

These and other objectives of the invention are achieved by a system of simple and economical connectors that allow a homeowner to quickly and easily protect a window or door with a strong covering.

This invention includes several embodiments in order to fit on wood, concrete-block, and masonry houses. Some embodiments are specialized for the type of house; some can be installed in a

vertical or horizontal position and some can be installed above, below, or to one side of the window. Several embodiments also use different manufacturing techniques including manipulated sheet metal, casting, forging, extrusion, and plastic molds or injection. Advantages of each will be discussed in the description.

This invention uses parts from my previous patent application # 08/597,194. The Provisional Patent application for this patent is #60-038,338 of 2/27/97.

Brief Description of the Drawings

- FIG. 1 is a perspective view of a floor mount and plywood bracket locked together.
- FIG. 2 is a perspective view of a floor mount.
- FIG. 3 is a perspective view of a plywood bracket.
- FIG. 4 is a side view of a floor mount and plywood bracket with plywood, prior to locking.
- FIG. 5 is a side view of a plywood bracket tilting into the locking position onto a floor mount.
- FIG. 6 is a side view of a plywood bracket and floor mount locked into position.
- FIG. 7 is a side view of a plywood bracket and floor mount showing plywood bracket mounted to a floor mount in a different position.
- FIG. 8 is a side view of a plywood bracket and floor mount locked together in a different position.
- FIG. 9 is a flat pattern layout of a floor mount.
- FIG. 10 is a top view of a floor mount.
- FIG. 11 is a side view of a floor mount.
- FIG. 12 is a flat pattern layout of a plywood bracket.
- FIG. 13 is a front view of a plywood bracket.
- FIG. 14 is a side view of a plywood bracket.
- FIG. 15 is a front view of a washer.
- FIG. 16 is a side view of a washer.
- FIG. 17 is a perspective view of a core mount.
- FIG. 18 is a flat pattern layout of a core mount.
- FIG. 19 is a top view of a core mount.
- FIG. 20 is a perspective view of a core mount and plywood bracket locked together.
- FIG. 21 is a flat pattern layout of a heavy-duty core bracket.
- FIG. 22 is a flat pattern layout of a duck mount.
- FIG. 23 is a perspective view of a swan mount.
- FIG. 23A is a perspective view of a swan mount about to be connected to a duck mount.
- FIG. 24 is a perspective view of a duck mount.
- FIG. 24A is a perspective view of a duck mount about to be connected to a swan mount.
- FIG. 24B is a perspective view of a swan mount and duck mount connected together forming a heavy-duty core bracket.
- FIG. 25 is a side view of a swan mount.
- FIG. 25A is a top view of a swan mount.
- FIG. 26 is a side view of a duck mount.
- FIG. 26A is a top view of a duck mount.
- FIG. 27A is a perspective view of a one-piece heavy-duty clip.
- FIG. 27B is a bottom view of a one-piece heavy-duty clip.
- FIG. 27C is a top view of a one-piece heavy-duty clip.
- FIG. 27D is a top view of slit skirt circumferences.
- FIG. 27E is a perspective view of a pipe clip.
- FIG. 27F is a flat pattern layout of a pipe clip.
- FIG. 28A is a flat pattern layout of a pipe wall mount.
- FIG. 28B is a side view of a pipe wall mount.
- FIG. 28C is a flat pattern layout of a pipe floor mount.
- FIG. 28D is a side view of a pipe floor mount.
- FIG. 28E is a perspective view of a pipe floor mount.
- FIG. 28F is a perspective view of a pipe wall mount.
- FIG. 28G is a perspective view of a safety pin.
- FIG. 29A is a perspective view of a mid-span wall mount.
- FIG. 29B is a perspective view of a mid-span floor mount.
- FIG. 29C is a flat pattern layout of a mid-span wall mount and mid-span floor mount.
- FIG. 30 is a flat pattern layout of a triangular wall mount.
- FIG. 31 is a perspective view of a triangular wall mount.
- FIG. 32 is a perspective view of a triangular wall mount showing different

bending.

FIG. 33 is a flat pattern layout of an offset floor mount.

FIG. 34 is a perspective view of an offset floor mount.

FIG. 35 is a flat pattern layout of a party floor mount.

FIG. 36 is a perspective view of a party floor mount.

FIG. 37A is a perspective view of a party floor mount held down by a bracket.

FIG. 37B is a perspective view of an offset floor mount held down by two brackets.

FIG. 37C is a perspective view of a triangular wall mount held down by brackets.

FIG. 38 is a perspective view of two brackets.

FIG. 39A is a flat pattern layout of a hook latch.

FIG. 39B is a top view of a hook latch.

FIG. 39C is a perspective view of a hook latch.

FIG. 39D is a perspective view of a base hook latch.

FIG. 39E is a perspective view of a mid-span floor latch.

FIG. 40A is a flat pattern layout of a twist mount.

FIG. 40B is a perspective view of a twist mount.

FIG. 40C is a perspective view of a twist mount with diverse bent wing tabs.

FIG. 41A is a perspective view of twist docks.

FIG. 41B is a perspective view of mirror-image twist docks.

FIG. 42A is a flat pattern layout of a twist dock.

FIG. 42B is a flat pattern layout of twist docks from a circle.

FIG. 43A is a top view showing locking angles when twisting a mid-span floor latch onto a base hook latch.

FIG. 43B is a flat pattern layout of a segmented mid-span floor latch floor mount with locking angles shown.

FIG. 43C is a flat pattern layout of a mid-span floor latch with locking angles shown.

FIG. 44A is a perspective view of a tongue and receiver locking two sheets together.

FIG. 44B is a flat pattern layout of a tongue.

FIG. 44C is a side view of a tongue.

FIG. 44D is a flat pattern layout of a receiver.

FIG. 44E is a top view of a receiver.

FIG. 44F is a side view of a tee retainer.

FIG. 45A is a perspective view of a fastener holding together two sheets of plywood.

FIG. 45B is a perspective view of the rear of a fastener.

FIG. 45C is a flat pattern layout of a fastener front plate.

FIG. 45D is a front view of a boltholder embodiment.

FIG. 45E is an edge view of a boltholder.

FIG. 45F is a front view of a boltholder.

FIG. 45G is a flat pattern layout of a sandwich fastener.

FIG. 46A is a perspective view of a sandwich fastener holding together a shutter.

FIG. 46B is a perspective view of a how keyhole brackets can hold a shutter together.

FIG. 46C is a perspective view of a tongue and receiver holding a shutter together.

FIG. 47A is a perspective view of different embodiments on a shutter.

FIG. 47B is a perspective view of different embodiments on a shutter.

FIG. 47C is a perspective view of different embodiments on a shutter.

Reference Numerals in Drawings

1	Bayonet	71	Opposite tang
2	Radiused bends	72	Midspan wall mount
3	Top side	73	Wall span
4	Notch	74	Dog tab
5	Bolt hole	74A	Dog tab bend
6	Base	75	Bolt holes
7	Floor mount	76	Pipe holes
8	Wall plate	77	Mid-span floor mount
9	Side edge	78	Floor span
10	Top edge	79	Bolt holes
11	T-bar	80	Cat tab
12	Radiused right-angle bend	80A	Cat tab bend
13	Topper edge	81	Pipe holes
14	Bayonet bend	82	Triangular wall mount
15	Core mount	83	Bracket
16	Cap	84	Offset floor mount
17	Heavy-duty core bracket	85	Party floor mount
18	Swan mount	86	Bolt holes
19	Duck mount	87	Lip
20	T-sides	88	Hook latch
21	T-curves	89	Semi-circle base
22	T-top	90	Catch opening
23	T-notch	91	Latch top
24	T-shaped opening	92	Base hook latch
25	Trough bend	93	Latch tab bend
26	Outer trough bend	94	Latch tab
27	J-side	95	Base plate
28	J-top	96	Bolt hole
29	Sider edge	97	Mid-span floor latch
30	Tops edge	98	Latch span
31	Carriage bolt hole	99	Latch cut-outs
32	Rib	100	Twist mount
33	Cap	101	Twist bend
33A	Start bend	102	Pipe hole
33B	End bend	103	Wing tab
34	Gooseneck bend	104	Twist dock
35	Head	105	Lip dock
36	Web	106	Circle dock
36A	Web top	107	Single mid-span floor latch
37	Overthrust bend	108	Receiver
38	Web bend	109	Tongue
39	Heavy-duty clip	110	Bolt hole
40	Washer	111	Adjustable bolt hole
41	Washer side	112	Bolt hole
42	Bolt hole	113	Ess bends
43	Slit skirt	114	Flare out bend
43A	Skirt bend	115	Tee retainer
44	Slit skirt cut-outs	116	Sandwich plate
45	Carriage bolt	117	Lips
46	Nut	118	Nail holes
47	Rear bend	119	Bolt hole
48	Shutter cover	120	Bolt holder
49	Rear web	121	Thin clip
50	Circular bend	122	Carriage hole
51	Skirt	123	Carriage bolt
52	Radius notches	124	Inner sandwich plate
53	Stress relievers	125	Wingnut
54	Pipe clip	126	Sheet
55	Pipe holes	127	Keyhole brackets
56	Rear tab		
56A	Rear tab bend		
57	Pipe		
58	Pipe floor mount		
59	Pipe wall mount		
60	Plywood bracket		
61	Back		
62	Floor web		
63	Bolt holes		
64	Wall web		
65	Bolt holes		
66	Nose tab		
66A	Nose tab bend		
67	Safety pin		
68	Tight opening		
69	Wrap		
70	Tang		

Description and Operation

FIG. 1

FIG. 1 shows a perspective view of a floor mount 7 and plywood bracket 60 locked together at the bottom. The locking mechanism will be shown and explained in other figures. The shutter cover 48 is omitted from this view, but would be attached to the plywood bracket 60 using carriage bolts 45 through carriage bolt holes 31. It can be seen that the floor mount 7 and plywood bracket 60 would sandwich the shutter cover 48 providing abundant much more surface holding power than many nails.

FIG. 2

Refer now to FIG. 2 which shows a perspective view of a floor mount 7. The one-piece floor mount 7 consists of a base 6, on either end, with a bolt hole 5. In between each base 6 is a bayonet 1 that is bent up at a right angle at the bayonet bend 14. The bayonet 1 is T-shaped with the top edge 13 having radiused bends 2 at the end forming a T-bar 11. Under the T-bar 11, a notch 4 has a top side 3.

At the rear of the floor mount 7, a radiused right-angled bend 12 forms the wall plate 8 with side edge 9 and top edge 10. The wall plate 8 and bayonet 1 are generally parallel to each other.

FIG. 3

Refer now to FIG. 3 which shows a perspective view of a plywood bracket 60. The one-piece plywood bracket 60 is J-shaped in profile, and consists of a back 61 and trough bend 25. The back 61 has straight sider edges 29, tops edge 30, carriage bolt holes 31 near the top and T-shaped opening edges 24 near the center bottom.

The T-shaped opening 24 has a similar shape as the bayonet 1 on the floor mount 7, but is slightly larger. The T-top 22, T-curves 21, T-sides 20, and T-shaped opening 24 allow the bayonet 1 to hook through with the notch 4 locking onto the T-notch 23.

The trough bend 25 has a T-shaped opening 24 opposite the T-shaped opening 24 on the back 61, but is hidden in this view. It is shown on FIG. 12 of the full pattern layout. The trough bend 25 allows the plywood bracket 61 to rock up into a locked position by

lifting on the shutter cover 48 (not shown here). The plywood bracket 61 rocks on the outer trough bend 26 and the J-side 27 and J-top 28 completes the trough bend 25.

Once the plywood bracket 61 is placed on the floor mount 7, as shown in side view on FIG. 4, and rotated up, as shown in FIG. 1, the T-shaped opening edges 24 lock under the top side 3 of the floor mount 7.

FIG. 4

Refer now to FIG. 4 which shows a side view of a plywood bracket 60 placed on a floor mount 7, prior to locking. On the plywood bracket 60, a shutter cover 48 is mounted to the side edge 29 using a carriage bolt 45, nut 46, and washer 40. The bayonet 1 of the floor mount 7 is shown inserted between the T-sides 20 of the plywood bracket 60.

FIG. 5

Refer now to FIG. 5 which shows the shutter cover 48 attached to the plywood bracket 60 with carriage bolt 45, nut 46, and washer 40. The shutter cover 48 is lifted into position to cover a large window or door. Notice that the J-top 28 is upward.

FIG. 6

Refer now to FIG. 6 which shows the shutter cover 48 locked into position and covering a large window or door. Notice the head of the carriage bolt 45 faces away from the window. This is a side view of the perspective view shown in FIG. 1. FIG. 6 shows the shutter cover 48 attached to the plywood bracket 60 using a carriage bolt 45, nut 46, and washer 40.

For extra clearance between the shutter cover 48 and the window, the shutter cover 48 can be bolted to the outside of the sider edge 29. FIG. 6 shows the shutter cover 48 attached to the inside of the sider edge 29, above the trough bend 25. The shutter cover 48 can also be bolted to the outside of the sider edge 29 so that in this view, the shutter cover 48 would be on the right side of the sider edge 29. This would provide for overlapping of the shutter covers 48 when the window or door is large and a single sheet of plywood could not completely cover the glass.

FIG. 7

Refer now to FIG. 7 which shows the plywood bracket 60 being lifted into position to cover a large window or door. Notice that the J-top 28 is downward as compared to FIG. 7. Since the t-shaped opening 24 is on both sides of the outer trough bend 26 (see FIG. 12), the plywood bracket 60 can latch on to the bayonet 1 with the J-top 28 facing the window or away from the window. This provides for warped shutter covers 48 so either side can face the window. Also, if the threads of the carriage bolt 45 are too long, the head of the carriage bolt 45 can face the window.

FIG. 8

Refer now to FIG. 8 which shows the plywood bracket 60 and attached shutter cover 48 locked into position. The top part of the shutter cover is attached to the wall with locks. Note that the head of the carriage bolt 45 is next to the floor mount 7 as compared to FIG. 6.

FIG. 9

Refer now to FIG. 9 which shows a flat pattern layout of a floor mount 7 prior to bending. All parts and bend lines are labeled.

FIG. 10

Refer now to FIG. 10 which shows the a flat pattern layout of a floor mount 7 after bending. The top edge 13 of the bayonet 1 now faces the viewer, along with the top edge 10 of the wall plate 8.

FIG. 11

Refer now to FIG. 11 which shows a side view of the floor mount 7 after bending. This view shows the radiused right-angle bend 12 and the sharp bayonet bend 14.

FIG. 12

Refer now to FIG. 12 which shows a flat pattern layout of a plywood bracket 60 prior to bending. All parts and the bend line are labeled. This shows the T-shaped opening 24 will be on both sides of the trough bend 25 after bending.

FIG. 13



Refer now to FIG. 13 which shows a front view of a plywood bracket 60 after bending. One can look clear through the T-shaped opening 24.

FIG. 14

Refer now to FIG. 14 which shows a side view of a plywood bracket 60 after bending, showing the J-shape.

FIG. 15

Refer now to FIG. 15 which shows a front view of the washer 40 that adds strength to the shutter cover 48. Carriage bolts 45 go through carriage bolt holes 31, through the shutter cover 48, through the bolt holes 42, and into the nuts 46. The washer 40 prevents the shutter cover 48 from splintering, distributes stresses a wide area, and prevents pullout of the nut 46.

FIG. 16

Refer now to FIG. 16 which shows a side view of a washer 40 and the washer side 41, and bolt holes 42.

FIG. 17

Refer now to FIG. 17 which shows an embodiment of a floor mount 7 that can be epoxied to a concrete floor, as would be found on a patio outside and apartment or condo. The core mount 15 has a bayonet 1 on the top, the same bayonet 1 as described in FIG. 2. The bayonet 1 is bent up from the cap 16 by the right-angled bayonet bend 14. The bayonet contains a notch 4, T-bar 11, radiused bends 2, and top edge 13.

The cap 16 has a circular bend called the circumference bend 50 around the circumference. Adjacent to the bottom edge of the circumference bend 50 are a series of radius notches 52 and stress relievers 53. The radius notches 52 and stress relievers 53 form skirts 51 that are perpendicular to the cap 16. The radius notches 52 and stress relievers 53 help prevent the cap from distorting during bending of the circumference bend 50.

A coring bit with the same diameter as the cap 16 is used to drill a core hole in the concrete floor next to the patio door. After sufficient depth, the drill is removed but the core of the concrete remains, forming a circle in the concrete. This keeps the

strength and integrity of the concrete, while providing extra surface area for the epoxy to adhere to.

Once the core circle is drilled, epoxy and the core mount 15 are inserted into the core circle. The skirts 51 are inserted into the core circle and the radius notches 52 and stress relievers 53 provide more edges for the epoxy to hold. The inner and outer surfaces of the skirts 51 provide edges for epoxy to grab. Also, any extra epoxy will grab onto the bottom surface of the cap 16.

Although the floor mount 7 could be mounted in the midpoint of a patio door, the wall plate 8 of the floor mount 7 may be hit by shoes of people walking out the patio door. The wall plate 8 could be eliminated, but it adds strength to the floor mount 7. The core mount 15 has strength from the cap 16 and skirts 51, so it could be used in the midpoint of a patio door.

A plywood bracket 61 and attached shutter cover 48 could be latched and locked onto the bayonet 1 of the core mount 15 as shown in FIG. 20.

FIG. 18

Refer now to FIG. 18 which shows a flat pattern layout of a core mount 15 prior to bending at the bayonet bend 14 and circumference bend 50. Other parts are labeled as in FIG. 17.

FIG. 19

Refer now to FIG. 19 which shows a top view of a core mount 15 after the circumference bend 50 has been completed. The bayonet bend 14 will bend the bayonet 1 cutout up toward the viewer, shown by the dashed lines.

FIG. 20

Refer now to FIG. 20 which shows a perspective view of a core mount 15 after a plywood bracket 61 has been latched and locked into position. The shutter cover 48 is omitted from this view for clarity.

FIG. 21

Refer now to FIG. 21 which shows a flat pattern layout of another embodiment of a core mount 15. The two-piece heavy-duty core bracket 17 uses the bayonet 1 of the floor mount 7, and the

circumference bend 50, skirts 51, radius notches 52, and stress relievers 53 of the core mount 15.

FIG. 21 shows the flat pattern layout of a swan mount 18 prior to bending. The top part of the swan mount 18 is identical to about $\frac{1}{4}$ of a core mount 15 as shown in the top half of FIG. 18. The bayonet 1 is shown near the center, with the circumference bend 50, radius notches 52, stress relievers 53, and skirts 51.

The bottom part of the swan mount 18 contains a rib 32 with a series of parallel bend lines. The cap bend 33 is a right-angle radius bend that forms the bulk of the rib 32 upward. The bend starts at the start bend 33A and ends at the end bend 33B, forming a gradual bend instead of a sharp bend. At the top of the rib 32, a gooseneck bend 34, containing a sharp overlapping bend, forms the head 35 and top head 35A.

A core drill is used to drill a core circle for epoxy and insertion of the skirts 51 of the swan mount 18, similar to insertion of the core mount 15 (FIG. 17). Only $\frac{1}{4}$ of the core circle is filled, as the duck mount 19 is inserted in the other half of the core circle, completing a two-piece heavy-duty core bracket 17.

FIG. 22

Refer now to FIG. 22 which shows a flat pattern layout of a duck mount 19 prior to bending. The bottom part of the duck mount 19 is identical to about $\frac{1}{4}$ of a core mount 15, except the bayonet 1 is missing. The circular bend 50, radius notches 52, stress relievers 53, and skirts 51 are similar to the swan mount 18 and core mount 15.

The top half of the duck mount 19 contains a web 36 with sharp bends. The overthrust bend 37 bends the web 36 on top of the cap 16. The right-angled web bend 38 bends the web 36 perpendicular to the cap 16, and ends with the web top 36A.

FIG. 23

Refer now to FIG. 23 which shows a perspective view of a swan mount 18 after bending. The bayonet 1 is hidden from view and is dashed. The circumference bend 50 and skirts 51 are shown away from

the viewer. The cap bend 33, rib 32, gooseneck bend 34, head 35, and top head 35A are shown toward the viewer. The base of the swan mount 18 is only about $\frac{1}{2}$ a circle.

FIG. 24

Refer now to FIG. 24 which shows a perspective view of a duck mount 19 after bending. The circumference bend 50, radius notches 52, stress relievers 53, and skirts 51 are shown toward the viewer. The overthrust bend 37 and web bend 38 form the web 36 and web top 36A.

FIG. 23A

Refer now to FIG. 23 which shows a perspective view of a swan mount 18 about to be put to a duck mount 19. The gooseneck bend 34 will capture the web top 36A of the duck mount 19, and the rib 32 will be against the web 36 of the duck mount 19.

FIG. 24A

Refer now to FIG. 24A which shows a perspective view of a duck mount 19 about to be united with a swan mount 18.

FIG. 24B

Refer now to FIG. 24B which shows a perspective view of a swan mount 18 and duck mount 19 mounted together forming a two-piece heavy-duty core bracket 17. This view has rotated 180° from FIG. 23A, so the bayonet 1 is toward the viewer. When the core circle is drilled into a concrete floor, epoxy and the heavy-duty core bracket 17 are inserted into the core circle. The bayonet 1 would face away from window to be protected, and the rib 32 would face the window. The rib 32 and attached web 36 add great strength in all directions.

FIG. 25

Refer now to FIG. 25 which shows a side view of a swan mount 18 with bayonet 1, skirts 51, cap bend 33, rib 32, and gooseneck bend 34.

FIG. 25A

Refer now to FIG. 25A which shows a top view of a swan mount 18 with bayonet 1, circumference bend 50, and gooseneck bend 34.

FIG. 26

Refer now to FIG. 26 which shows a side view of a duck mount 19 showing the circumference bend 50, overthrust bend 37, web bend 38, web 36, and web top 36A.

FIG. 26A

Refer now to FIG. 26A which shows a top view of a duck mount 19 showing the circumference bend 50 and web top 36A.

FIG. 27A

Refer now to FIG. 27A which shows another embodiment of a floor mount 7, core mount 15, and heavy-duty core bracket 17. FIG. 27A shows a perspective view of a one-piece heavy-duty clip 39. The bayonet 1, circumference bend 50, radius notches 52, stress relievers 53, and skirts 51, the same as on previous brackets, are shown toward the front. The bayonet cutout 1A is shown clearly in this view.

Toward the rear, slit skirt cut-outs 44 form slit skirts 43 by a right-angled skirt bend 43A. The slit skirts 43 are the same length as the skirts 51, and are in the same circumference circle. A right-angle bend at the rear bend 47 forms the rear web 49. The rear web 49 adds great strength to the clip.

The heavy-duty clip 39 is inserted into a drilled core circle with epoxy, similar to the core mount 15 and heavy-duty core bracket 17. A plywood bracket 60 and shutter cover 48 are latched to the bayonet 1 as described for the plywood bracket 60.

FIG. 27B

Refer now to FIG. 27B which shows a bottom view of a heavy-duty clip 39. The skirts 51 and slit skirts 43 are shown projecting toward the viewer, forming a circle that is the same diameter as a drilled core circle. The bayonet 1 is omitted for clarity in this view.

FIG. 27C

Refer now to FIG. 27C which shows a top view of a heavy-duty clip 39, showing the circumference bend 50, top edge of the rear web 49, slit skirt cut-outs 44, and skirt bend 43A.

FIG. 27D

Refer now to FIG. 27D which shows that the slit skirts 43 could

be formed in two ways. Circumference A is the circumference of a core drill. The slit skirts 43 could be cut at A-C and bent downward, or cut at A-B and bent downward. The skirt bend 43A is still at circumference A.

FIG. 27E

Refer now to FIG. 27E which shows an embodiment of a heavy-duty clip 39, the pipe clip 54. Everything on the front is the same as the heavy-duty clip 39 except for the rear tab 56, which has pipe holes 55. The pipe clip 54 is inserted into a drilled core circle with epoxy, the same as a heavy-duty clip 39 except the pipe clip is rotated 90° so the rear tab 56 is perpendicular to the window. Standard pipes are inserted through the pipe holes 55 as shown on FIGS. 28E and 28F.

FIG. 27F

Refer now to FIG. 27F which shows a flat pattern layout of a pipe clip 54.

FIG. 28A

Refer now to FIG. 28A which shows a flat pattern layout of a pipe wall mount 59, prior to bending at the nose tab bend 66A.

FIG. 28B

Refer now to FIG. 28B which shows a side view of a pipe wall mount 59, prior to bending at the nose tab bend 66A.

FIG. 28C

Refer now to FIG. 28C which shows a flat pattern layout of a pipe floor mount 58, prior to bending at the rear tab bend 56A.

FIG. 28D

Refer now to FIG. 28D which shows a side view of a pipe floor mount 58, prior to bending at the rear tab bend 56A.

FIG. 28E

Refer now to FIG. 28E which shows a perspective view of a pipe floor mount 58 bent at the rear tab bend 56A. The floor web 62 is shown mounted to the floor with bolts through bolt holes 63. Pipes 57 are shown going through the pipe holes 55 on the rear tab 56.

FIG. 28F

Refer now to FIG. 28F which shows a perspective view of a pipe

wall mount 59 bent at the nose tab bend 66A. The wall web 64 is shown mounted to the wall with bolts through bolt holes 65. Pipes 57 are shown going through the pipe holes 55 on the nose tab 66.

FIG. 28G

Refer now to FIG. 28G which shows a safety pin 67 for securing pipe 57 to the pipe floor mount 58 and pipe wall mount 59. The safety pin 67 is bent from standard wire into the preferred shape. The tight opening 68 fits around the pipe 57 and the wrap 69 fits tightly to the pipe 57. The tang 70 is on one side of the nose tab 66 on the pipe wall mount 59, or on one side of the rear tab 56 of the pipe floor mount 58 and the opposite tang 71 is on the opposite side. This safety pin 67 quickly ties the pipe 57 to the rear tab 56 or nose tab 66.

FIG. 29A

Refer now to FIG. 29A which shows a perspective view of a mid-span wall mount 72 for use across a series of large windows or doors. The wall span 73 is flat and has bolt holes 75 for attachment to a door jamb or window frame. Right-angle dog tab bends 74A form dog tabs 74 that are parallel to each other. The dog tabs 74 contain pipe holes 76.

If a span is large, such as a patio door next to a picture window, the mid-span wall mount 72 can be attached to the door jamb by bolts through the bolt holes 75 on the wall span 73. The dog tabs 74 must be perpendicular to the floor, and the pipe holes 76 should be in line with the pipe holes 67 of a pipe wall mount 59, that is attached to the wall. Plywood is surrounded by pipe 57, as described in FIG. 47C.

FIG. 29B

Refer now to FIG. 47B which shows a perspective view of a mid-span floor mount 77 for use across a series of large windows or doors. The floor span 78 is flat and has bolt holes 79 for attachment to the floor or deck. Right-angle cat tab bends 80A form cat tabs 80 that are parallel to each other. The cat tabs 80 contain pipe holes 81.

If a span is large, such as a patio door next to a picture

window, the mid-span floor mount 77 can be attached to the floor by bolts through the bolt holes 79 on the floor span 78. The cat tabs 80 must be perpendicular to the wall, and the pipe holes 81 should be in line with the pipe holes 55 of a pipe floor mount 58, that is attached to the floor. Plywood is surrounded by pipe 57, as described in FIG. 47C.

FIG. 29C

Refer now to FIG. 29C which shows a flat pattern layout for a mid-span wall mount 72 on the right, and a mid-span floor mount 77 on the left. The same tool and die can be used to make both mounts by moving pins for stamping of pipe holes 76 and 81.

FIGS. 30-32

Refer now to FIG. 30 which shows a flat pattern layout of another embodiment, being a triangular wall mount 82. Using pipe 57 to hold down the plywood is ingenious, but there are several ways of holding down the pipe 57. FIGS. 31 and 32 show two variations using different bending.

FIGS. 33-34

Refer now to FIG. 33 which shows a flat pattern layout for an offset floor mount 84, again using pipe 57. FIG. 34 shows the offset floor mount 84 after bending.

FIGS. 35-36

Refer now to FIG. 35 which shows a flat pattern layout for a party floor mount 85, again using pipe 57. FIG. 36 shows the party floor mount 85 after bending.

FIGS. 37A-37C

Refer now to FIG. 37A which shows a perspective view of a party floor mount 85 held down securely to a structure by a bracket 83. The bracket 83 is permanently attached to a structure and the party floor mount 85 twists into the bracket 83 when a hurricane is imminent. The bracket 83 protects and adds strength to holding the party floor mount 85, pipe 57, and plywood securely to the house. FIG. 37B shows a perspective view of an offset floor mount 84 held securely to a structure by the same brackets 83.

The bracket 83 would be permanently attached to the house.

When a hurricane approaches, a party floor mount 85 or offset floor mount 84 is placed along side the bracket 83 and twisted 90°. This puts the mounts inside the brackets 83. When pipe 57 is inserted through pipe holes of the mounts, the pipe prevents the mounts from twisting back, so the mounts stay in the brackets 83.

FIG. 37C shows a means of attaching the triangular wall mount 82 to the wall using the same brackets 83. The brackets 83 are secured to the wall with the triangular wall mount 82 in the correct position. The triangular wall mount 82 is then twisted 90° counter-clockwise, releasing itself from the bracket 83. The bracket 83 stays permanently attached to the wall. When a hurricane comes, the triangular wall mount 82 can be quickly inserted into the bracket by twisting 90° clockwise. Pipe 57 keeps the triangular wall mount 82 from twisting, when the pipe 57 and plywood are installed. The party floor mount 85 and offset floor mount 84 are installed with brackets 83 in the same way.

FIG. 38

Refer now to FIG. 38 which shows a perspective view of two brackets 83. The brackets are permanently attached to a structure using bolts through bolt holes 86. The lip 87 provides an offset, whereby a triangular wall mount 82, offset floor mount 84, or party floor mount 85 can be inserted in the brackets 83 by twisting the mounts 90° clockwise.

The shutter is locked using wingnuts of my previous patent application #08/597,194 of 2/96.

FIG. 39A

Refer now to FIG. 39A which shows another embodiment. FIG. 39A shows a flat pattern layout of a hook latch 88 prior to bending. FIG. 39A shows the semi circle base 89, catch opening 90, and latch top 91.

FIG. 39B

Refer now to FIG. 39B which shows a top view of a hook latch 88 after bending. The diameter of the semi-circular base 89 and latch top 91 is similar to a circular core drill mentioned previously. This view shows that another hook latch 88 can be

placed next to this hook latch 88, forming a mostly complete circle, with a circumference equal to a drilled core circle. When a core drill circle is drilled in concrete, epoxy and two hook latches 88 can be inserted with the semi circle base 89 locked into the epoxy with the latch top 91 and catch opening 90 facing toward the window and away from the window.

FIG. 39C

Refer now to FIG. 39C which shows a perspective view of a hook latch 88 showing the semi-circle base 89, catch opening 90, and latch top 91.

FIG. 39D

Refer now to FIG. 39D which shows an embodiment of a hook latch 88. The one-piece base hook latch 92 has the same circumference as a hook latch 88, but has both latches together on a plate that can be bolted to wood or concrete. The base plate 95 has bolt holes 96 for attachment to wood or concrete. The latch tabs 94 are similar to the latch top 91 on the hook latch 88. The base hook latch 92 is formed with a circular base plate 95 and the latch tabs 94 are bent up at a generally right angle circular bend at the latch tab bend 93. The base hook latch 92 is bolted to the structure with latch tabs 94 facing toward the window and away from the window.

FIG 39E

Refer now to FIG. 39E which shows an embodiment of a mid-span floor mount 77, The mid-span floor latch 97 is the same as the mid-span floor mount 77 except the latch span 98 has latch cut-outs 99. The latch cut-outs 99 fit over latch tabs 94 on the base hook latch 92 or over the latch top 91 on the hook latch 88. The mid-span floor latch 97 is then rotated 90° and pipe 57 is inserted through the pipe holes 81 preventing twisting off. The mid-span floor latch is securely locked to the floor. The latch cut-outs 99 can also be put onto the wall span 73 of a mid-span wall mount 72.

FIG. 40A

FIG. 40A shows an embodiment of a floor mount. FIG. 40A shows a flat pattern layout of a twist mount 100 with twist bend 101 and

pipe holes 102. The use and operation of pipe holes 102 have been discussed previously. The twist bend 101 can be bent in two directions.

FIGS. 40B-40C

FIGS. 40B-40C show bending the wing tabs 103 in different directions forms a twist mount 100 that can be mounted 90° in different directions using twist docks 104.

FIGS. 41A-41B

FIGS. 41A-41B show twist docks 104 with a circle dock 106 that has the same diameter as a core drill circle described previously. The core drill drills a core circle and epoxy and two twist docks 104 are inserted into the epoxy with the circle dock 106 in the epoxy. FIGS 41A and 41B show how they could be set into the epoxy. They will not be noticed. When a hurricane comes, the twist mounts 100 can be inserted into the twist docks 104 and rotated 90°. Pipes 57 through the pipe holes 102 will prevent twisting and pullout. They could be mounted on a masonry wall with the location of the pipe holes 102 changed slightly. Operation is the same as other pipe-using brackets.

FIG. 42A-42B

Refer now to FIG. 42A which show how the flat pattern layout looks before cutting and bending. FIG. 42B shows before and after cutting and bending.

FIGS. 43A-43C

Refer now to FIGS. 49A-49C which show the locking angles for a base hook latch 92 and mid-span floor latch 97. FIG. 49B shows a single mid-span floor latch 107. The pipe holes could be moved for use as a wall mount.

FIGS. 44A-44F

FIG. 44A shows a perspective view of a receiver 109 and tongue 108 locking two sheets 126 together. The tongue 109 is held to the top sheet 126 with a bolt through a bolt hole 110 and a bolt held by a tee retainer 115. The tongue 109 is shown inserted into the receiver 108 which is bolted to the lower sheet 126 by bolts through bolt holes 112.

FIG. 44B shows a flat pattern layout of a tongue 109 with the bolt hole 110 and adjustable bolt hole 111. FIG. 44C shows a side view of the tongue 109.

FIG. 44D shows a flat pattern layout for a receiver 108 before bending at the ess bendlines 113 and flare out bends 114. FIG. 44E shows a top view of a receiver 108 after bending at the ess bendlines 113 and flare out bends 114. FIG. 44F shows a side view of a tee retainer 115. The tee retainer 115 is screwed onto a bolt to hold down the tongue 109, as shown in FIG. 44A.

FIGS. 45A-45B

FIG. 45A shows a sandwich plate 116 and inner sandwich plate 124 holding together two sheets 126. FIG. 45A shows carriage bolts 123 inserted through the sandwich plate 116, through the sheets 126, through the inner sandwich plate 124, and tightened down with wingnuts 125. The heads of the carriage bolts 123 are kept from pushing out by bolt holders 120. The thin steel is shown wrapped around the bolt head and snapped into the lips 117.

FIG. 45B shows a view of the inner sandwich plate 124 with the wingnuts 125 tightened down onto the carriage bolts 123.

FIGS. 45C-45G

FIG. 45C shows a flat pattern layout of a sandwich plate 116 with nailholes 118, carriage holes 122, bolt hole 119, and lips 117, that are slightly raised.

FIG. 45D shows a side view of an embodiment of a boltholder 120. The thin clip 121 works like a boltholder 120 fitting between the lips 117 and over the head of a carriage bolt 123 as shown on FIG. 45A.

FIG. 45E shows an edge view of a boltholder 120. This shows how the thin edge can fit under the lips 117 on the sandwich plate 116 and over the bolt head 122.

FIG. 45F shows a front view of a boltholder 120. This shows how the left and right edge fits under the lips 117 and over the bolt head of the carriage bolt 122.

FIG. 45G shows a flat pattern layout of a front sandwich plate 124 with bolt holes 119.

FIGS. 46A-46C

FIG. 46A shows how a sandwich plate 116 can use a smaller sheet 126 as a front sandwich plate to tie two sheets 126 together as a shutter. Wingnuts 125 can tie the sheet 126 down onto the carriage bolts 123.

FIG. 46B shows how two keyhole brackets 127 can tie two sheets 126 together like FIG. 46A. Heads of carriage bolts 123 can be inserted into the keyhole brackets 127 and the sheet from FIG. 46A can be placed over the carriage bolts 123 exactly as shown in FIG. 46A.

FIG. 46C shows how a tongue 109 and receiver 108 can also be used horizontally to tie two sheets 126 together.

FIGS. 47A-47C

FIG. 47A shows how to lock shutters from inside a home using a floor mount 7 and plywood bracket 60 from FIG. 1. A shutter with plywood brackets 60 is shown being swung up on floor mounts 7. Also shown are the keyhole brackets 127 and wingnuts 125 that will lock onto carriage bolts 123.

FIG. 47B shows how the shutters can overlap and still be locked together with keyhole brackets 127 and wingnuts 125. On the left side of FIG. 47B, floor mounts 7 and plywood brackets 60 are securing the lower part of a sheet 126. On the right side, a core mount 15 is secured to concrete, and a plywood bracket 60 is secured to the sheet 126. The shutters are secured with keyhole brackets 127 and wingnuts 125.

FIG. 47C shows shutters secured to a house using a pipe floor mount 58 on the floor, pipe wall mount 59 on the wall, and pipe 57 securing the shutter sheets 126 to the house.

In the center of FIG. 47C, sandwich plates 124 and wingnuts 124 are used to secure the overlapped shutter sheets 126.

On the right part of FIG. 47C, tongues 109 and receivers 108 are used to secure two sheets 126 together.

CONCLUSION, RAMIFICATIONS, AND SCOPE OF INVENTION

Accordingly, the reader will see that the hurricane shutter hardware of the invention are simple, strong, inexpensive, and easy to install. The invention provides a means of quickly attaching a large covering over a vast window or door that can withstand wind, wind-driven missiles, and heavy rain.

To prevent hurricane damage, engineers have maintained that the roof must be held down and wind and rain must be prevented from entering a house. In the future, building codes may require new houses built in hurricane-prone areas to have shutters that will keep out wind-driven rain and debris. This invention provides a low-cost, easy to install and remove, safe and reliable means of protecting large windows and doors. This invention can be retro-fit onto new and older homes built of wood or masonry.

This invention concerns the hardware for attaching a covering over a large window or door. Brackets are permanently attached to the wall or floor framing a large window or door. Locking brackets are permanently attached to the window shutter which can be made of almost any strong material.

The homeowner supplies the covering material that is contiguous to his or her area. The covering material can be made of plywood, bamboo, aluminum, steel, acrylic sheet, kevlar or other lightweight and strong material that may be invented in the future. The shutters can be made from recycled steel, aluminum, or car tires. Shutters can have more than one use. As long as the homeowner can lift the shutter material, almost any thickness of material can be accommodated. The thinner and stronger the material, the more security and ease of storing the shutters for future use.

The shutters can be stored in a basement, crawlspace, garage, or shed. As photovoltaic's decrease in price, they could be attached to the inside part of the window shutters, and be attached to the roof, supplying electricity to the house. when a hurricane is eminent, the homeowner removes the panels from the

roof, and turns them so the photovoltaic's are on the inside of the window, giving the shutters two important uses.

The shutters can be made from two or more materials. They could have thin steel on the inside, with a rubberized coating on the outside to absorb and dampen shocks from wind-borne missiles. Or it could have lightweight aluminum on the inside, with neoprene on the outside. The shutter could have lightweight honeycomb structures on the inside to provide strength, and a thin coating of metal on the inside part, facing the window, and neoprene on the outside. Plywood was used in the past, because it was plentiful and cheap. New recycling and reusing of materials may make these shutters very economically and environmentally attractive to homeowners and government agencies.



References Cited

U.S. PATENT DOCUMENTS

4,248,022	2/1981	Walker.
4,333,271	6/1982	De Paolo et al.
4,384,436	5/1983	Green.
5,228,238	7/1993	Fenkell.
5,335,452	8/1994	Taylor.
5,345,716	9/1994	Caplan.
5,347,775	9/1994	Santos.
5,383,315	1/1995	Birs.

OTHER PUBLICATIONS

Building Performance: Hurricane Andrew in Florida, 1993, Federal Emergency Management Agency, FIA-22, p.35.

Building Performance: Hurricane Iniki in Hawaii, 1993, Federal Emergency Management Agency, FIA-23, p. 54.

Hurricane Hugo One Year Later, 1991, American Society of Civil Engineers, p. 55.

Claims: I claim:

~~20.~~ Mounts for holding down a frame to a structure for protection from hurricane forces comprising:

- a. a male mount having a top web, and base web that is rotatable about a central pivot point;
- b. a female mount having permanent attachment to a building through a base web;
- c. said male mount having rotating attaching means to a female mount;
- d. said female mount having a top web, and generally flat shape and predetermined area on said base web as a means for receiving said base web of said male mount;
- e. said male mount having a generally flat shape and predetermined area on said base web as a means for attachment under said base web of said female mount;

2

~~21.~~ The male mount of claim 20 wherein said base web is rotatable clockwise and counter clockwise about said pivot point.

3

~~22.~~ The male mount of claim 20 wherein said base web having similar predetermined area as said base web of said female mount.

4

~~23.~~ The male mount of claim 20 wherein said top web having a generally perpendicular angle to said base web.

5

~~24.~~ The male mount of claim 20 wherein said top web having attachment means to a frame.

6

~~25.~~ The female mount of claim 20 wherein said base web having a raised edge adjacent to said attaching means as a means of raising the top edge of said base web.

7

~~26.~~ The female mount of claim 20 wherein said base web having an opening of predetermined area under said base web as a means for rotating in said base web of said male mount.

8

~~27.~~ A male mount that attaches to a female mount by rotation of a male base web into and under a base web of a female mount thereby securing said male mount and attached frame to said female mount and attached structure.

add
A'

Rule
126

09690657-101700



ABSTRACT

Hurricane shutter hardware that are simple, inexpensive, and easy to install on a house. The hardware provide a means of quickly attaching a large covering over a large window or door that can withstand wind, wind-driven missiles, and heavy rain.

To prevent hurricane damage, engineers have maintained that wind and rain must be prevented from entering a house. This invention provides a low-cost, easy to install and remove, safe and reliable means of protecting large windows and doors from wind, rain, and debris. This invention can be retro-fit onto new and older homes built of wood or masonry.

This invention concerns the hardware for attaching a large covering over a window or patio door. Brackets are permanently attached to a house near a large window or patio door. Brackets are attached to a window shutter that can be made of almost any material.

The homeowner supplies the covering material that is contiguous to his or her area. The covering material can be made of plywood, bamboo, aluminum, steel, acrylic sheet, kevlar or other lightweight and strong material that may be invented in the future. The shutters can be made from recycled steel, aluminum, and car tires.

The brackets carry most of the weight of the shutter, making installation of the shutter quick and easy. When the shutter is rocked into position, it can not move upward, outward, inward, or laterally.

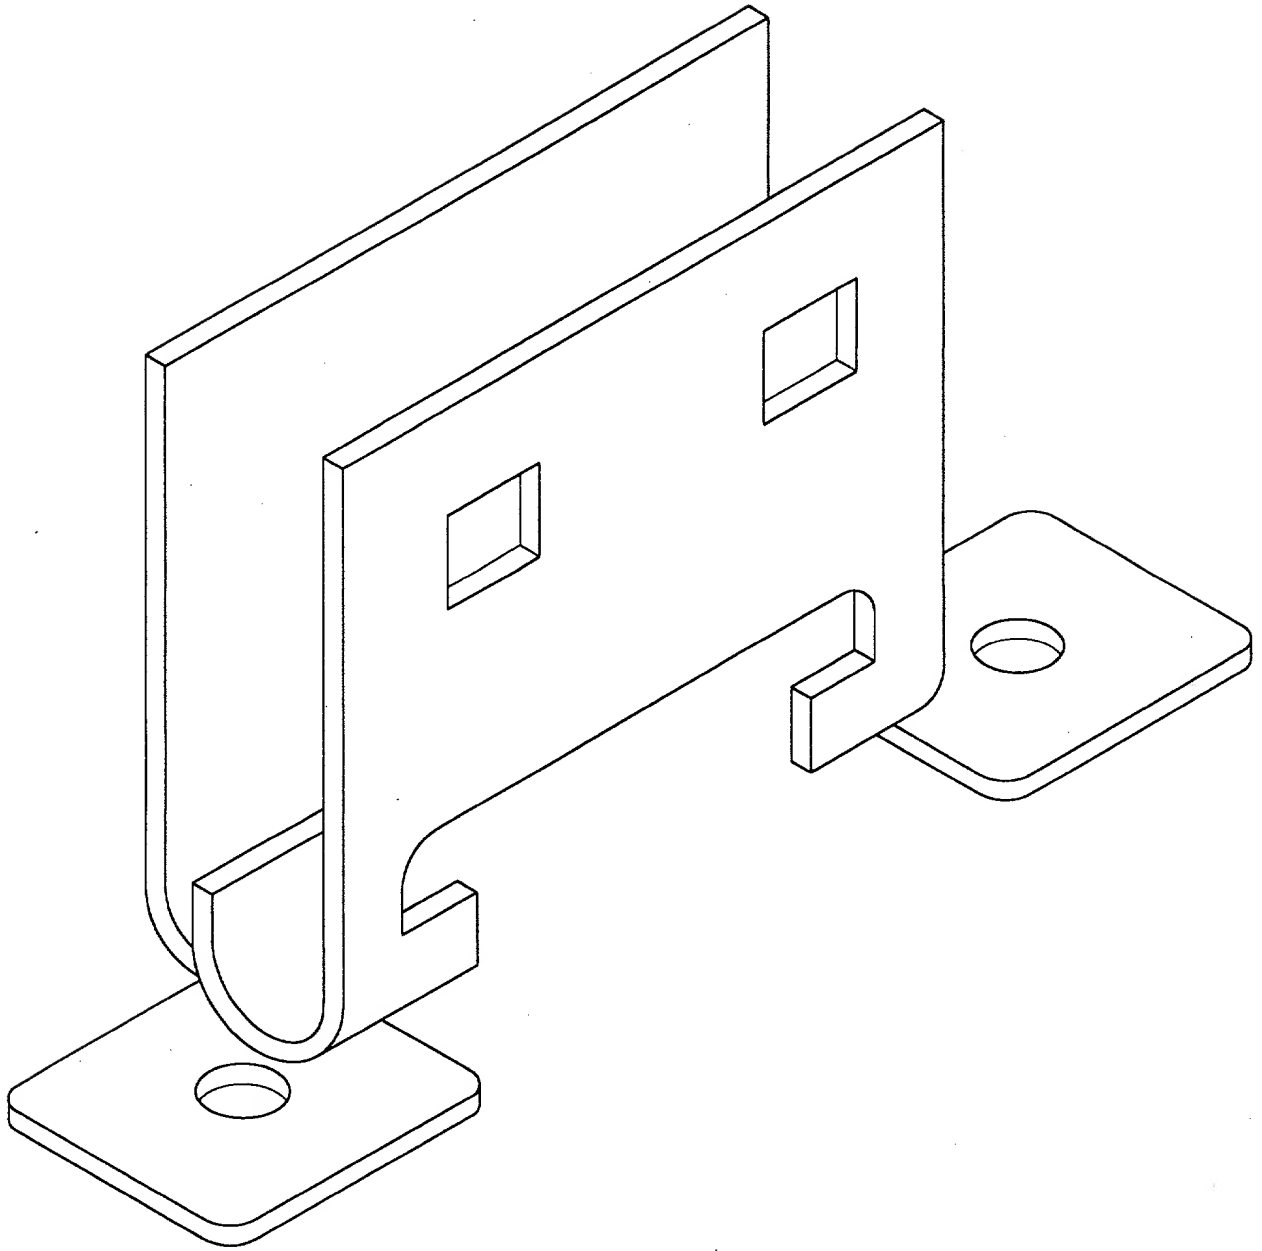


FIG. 1

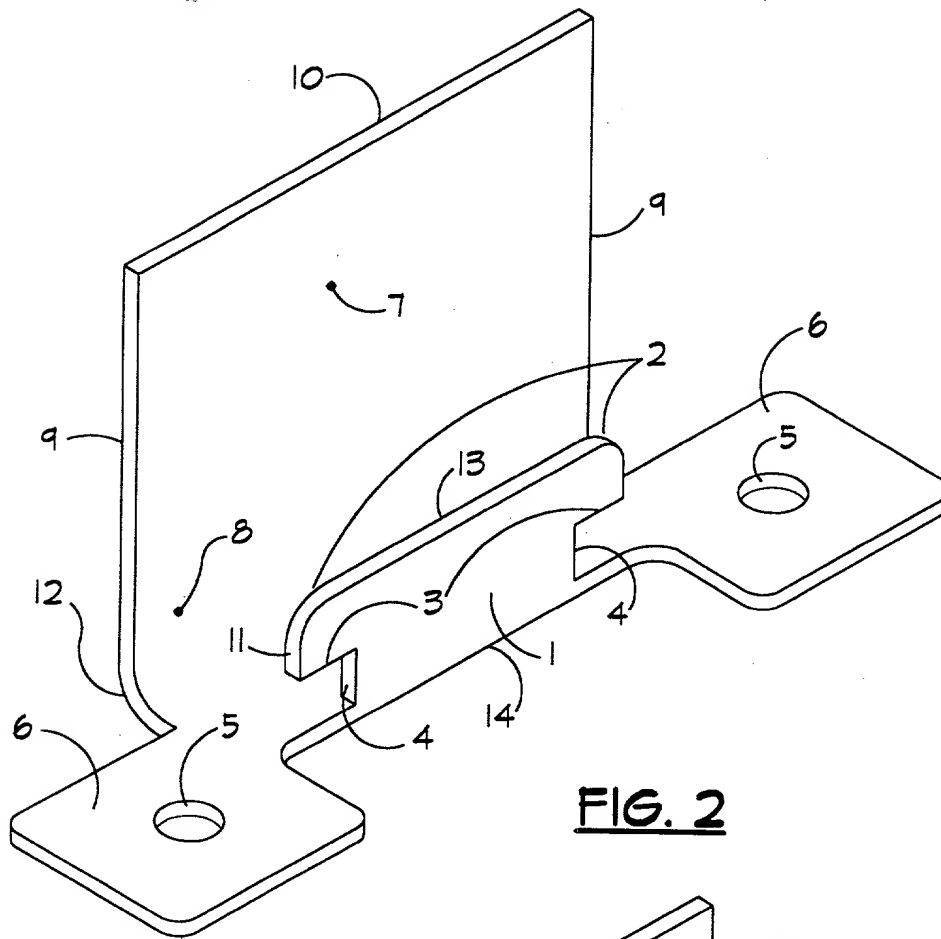


FIG. 2

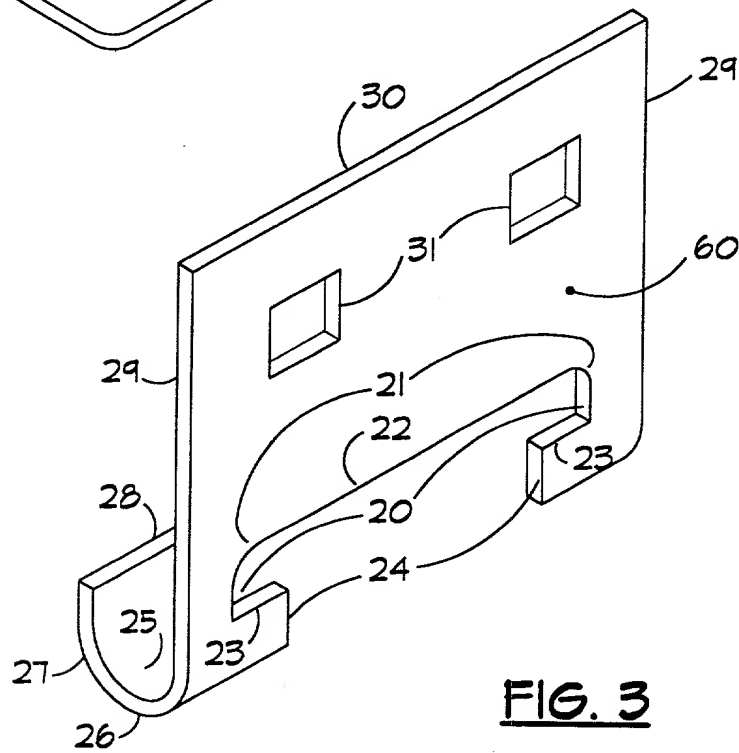


FIG. 3

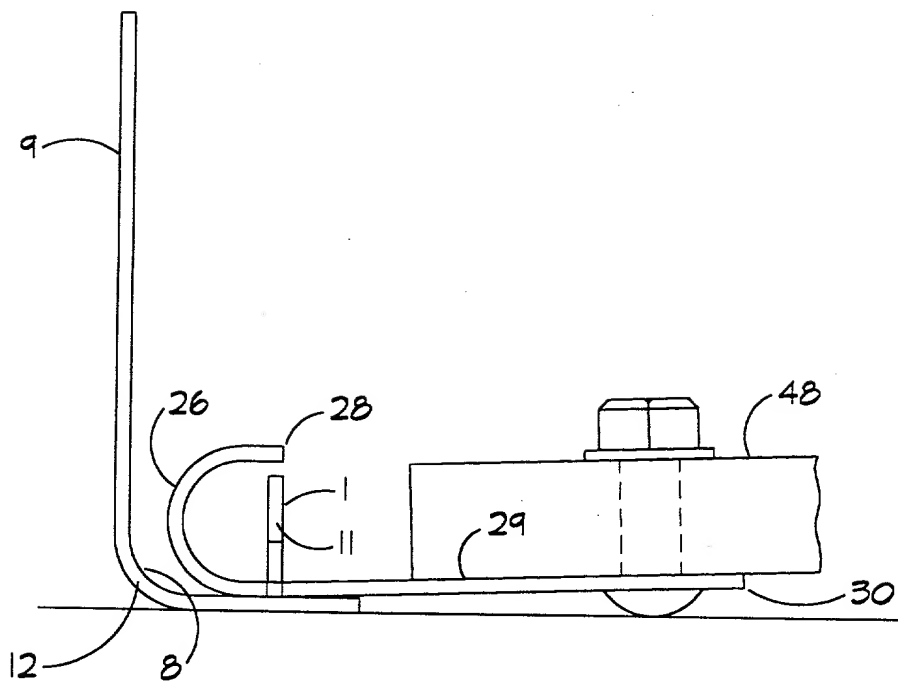


FIG. 4

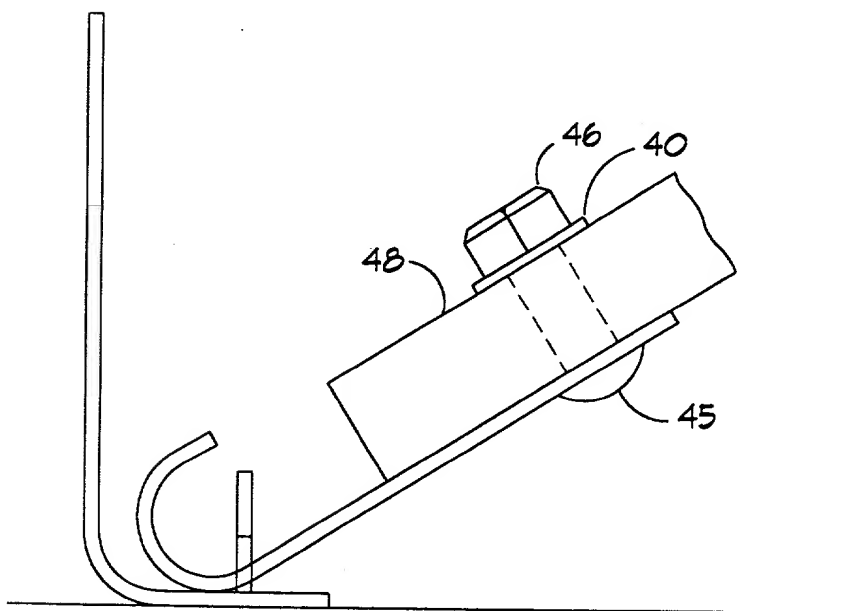


FIG. 5

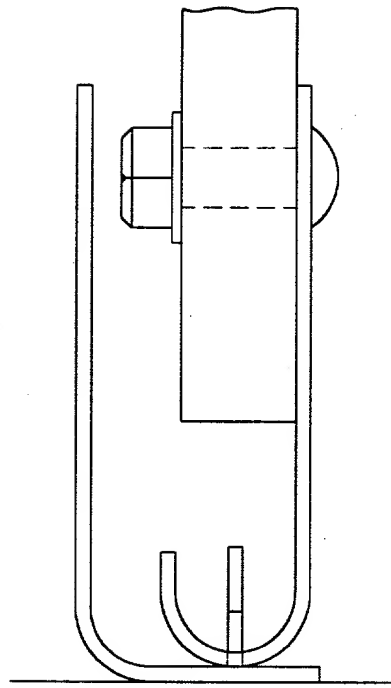


FIG. 6

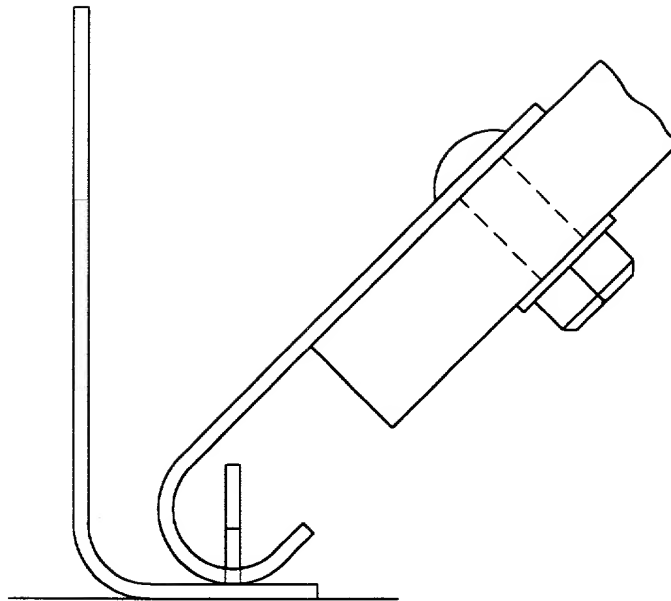


FIG. 7

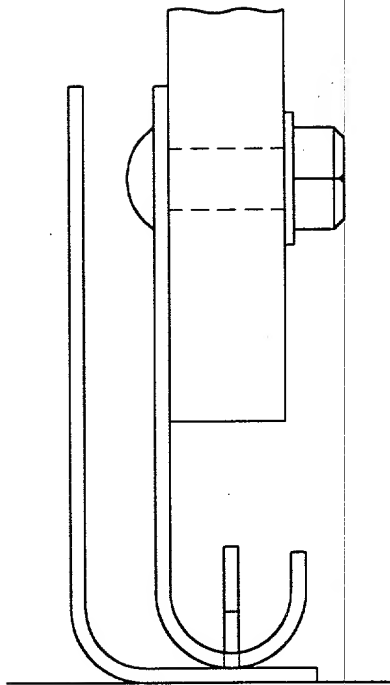


FIG. 8

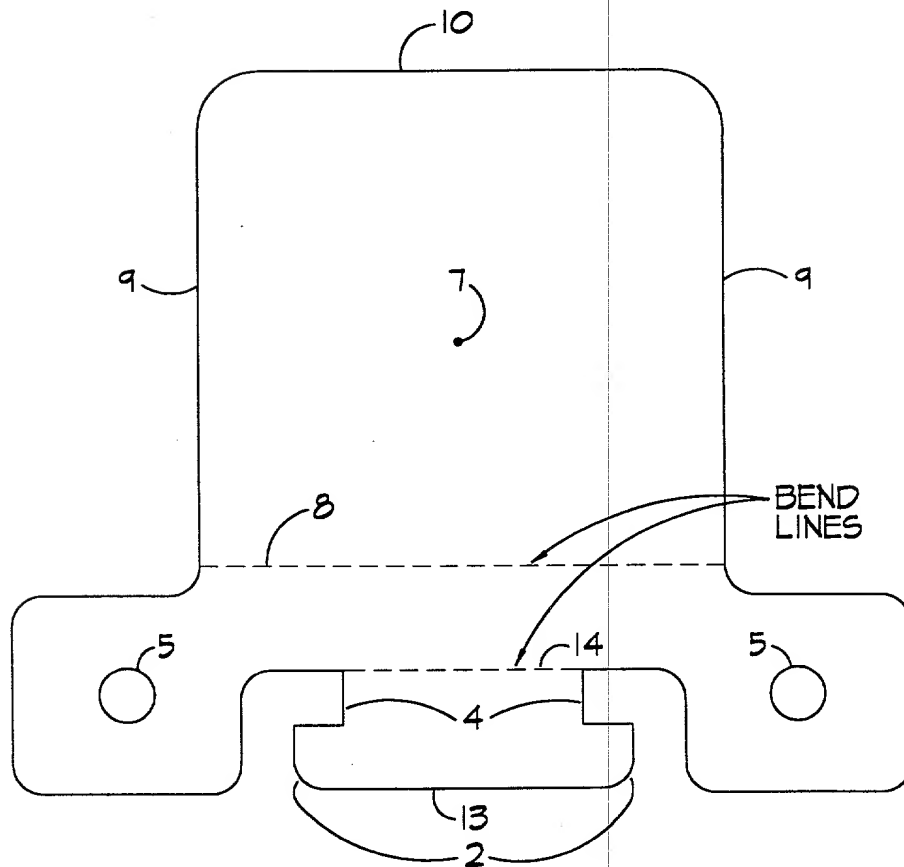


FIG. 9

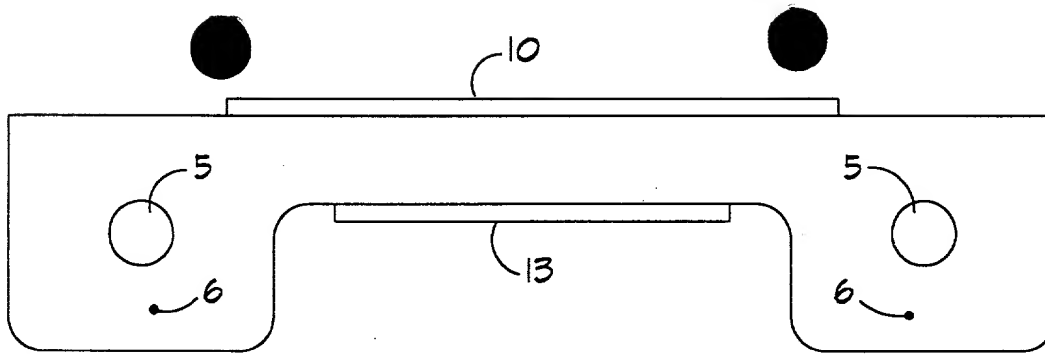


FIG. 10

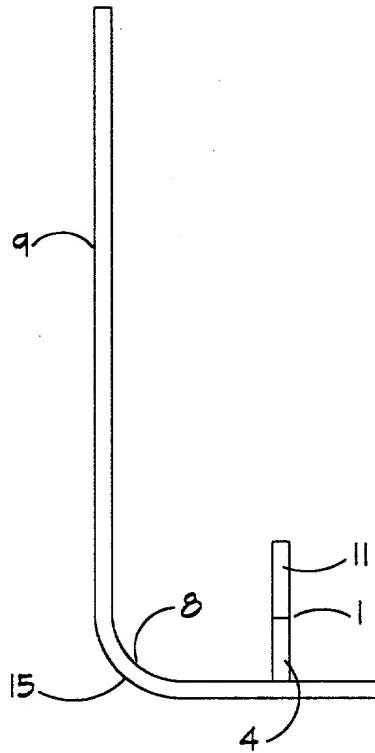


FIG. 11

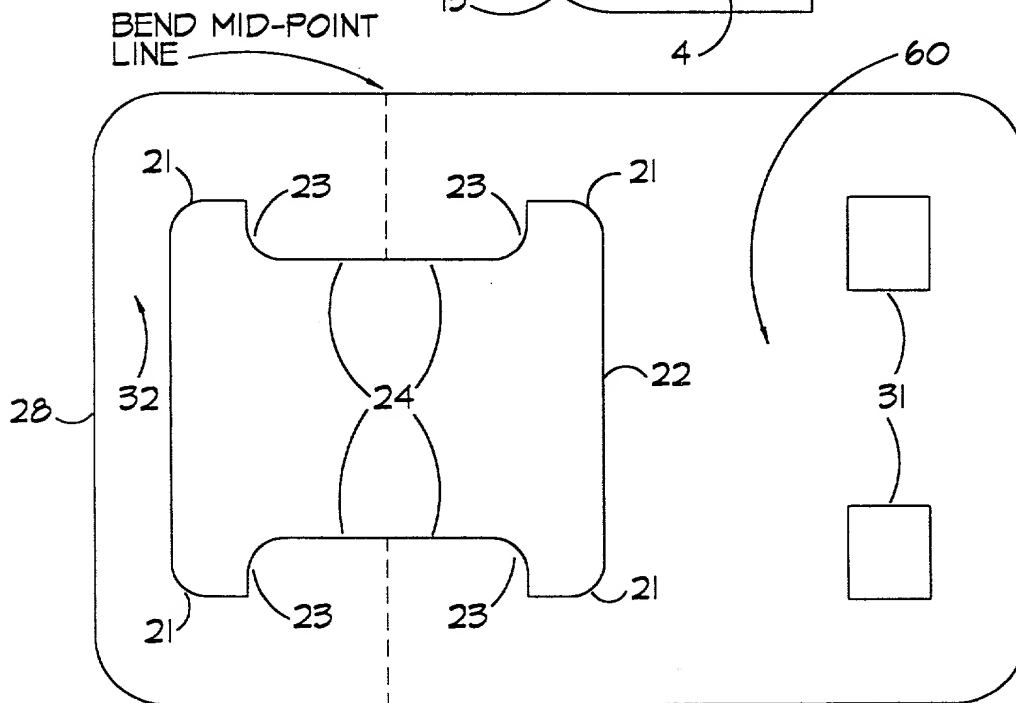


FIG. 12

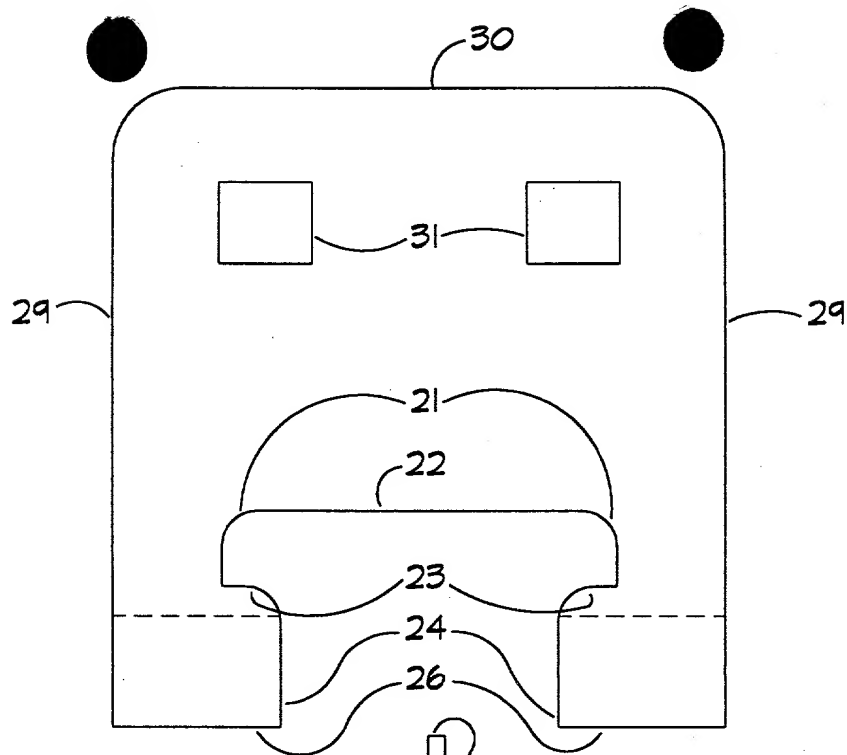


FIG. 13

FIG. 14

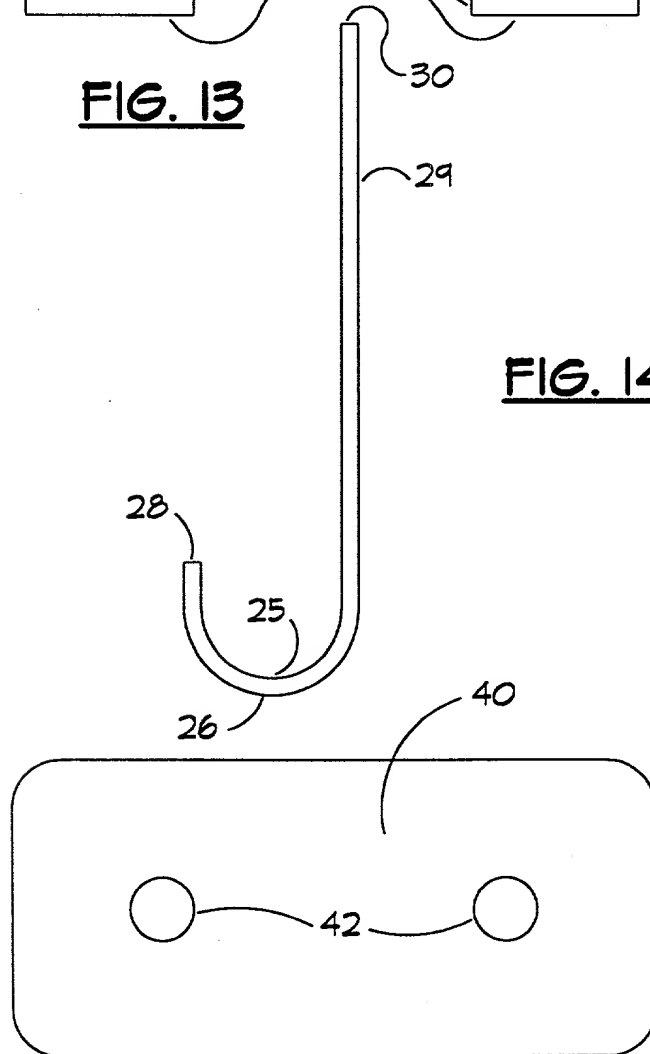


FIG. 15

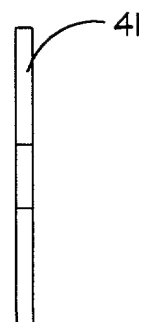


FIG. 16

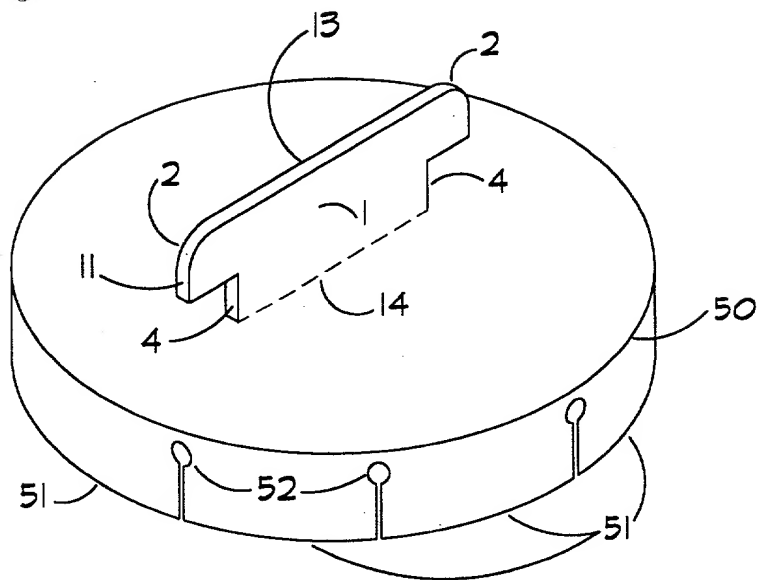


FIG. 17

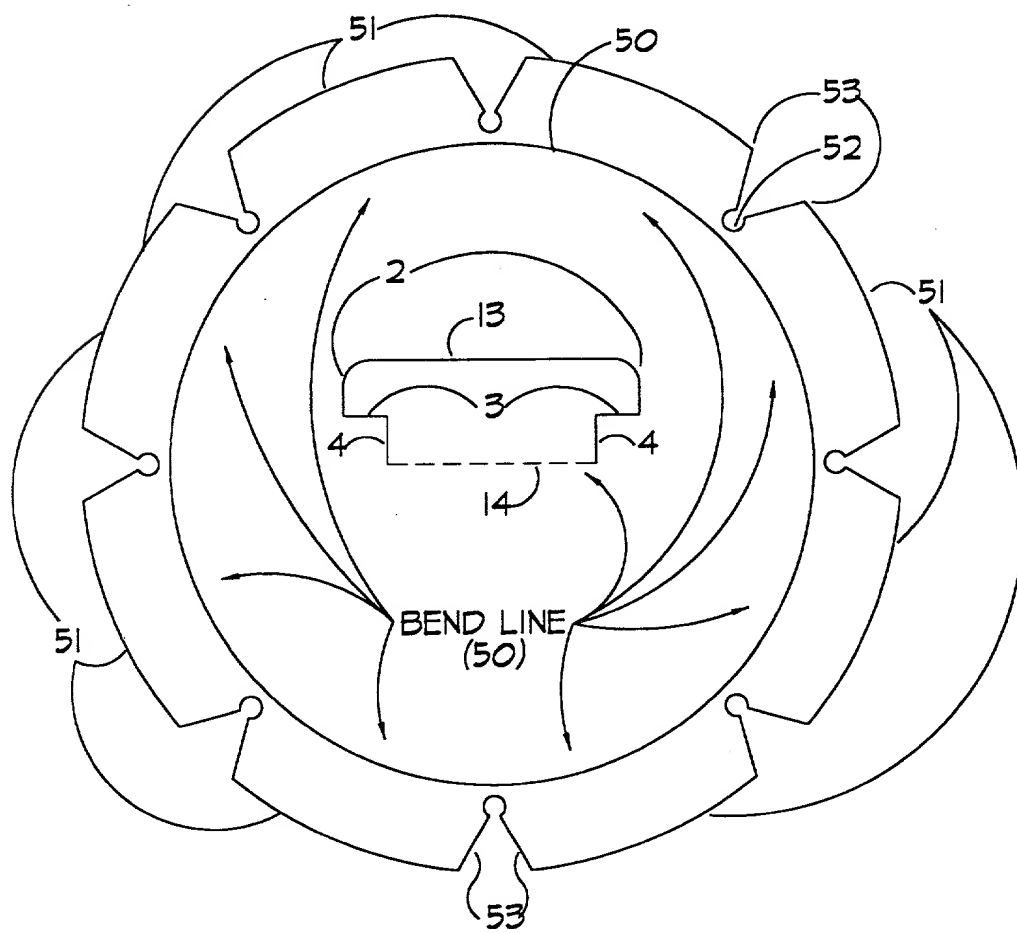


FIG. 18

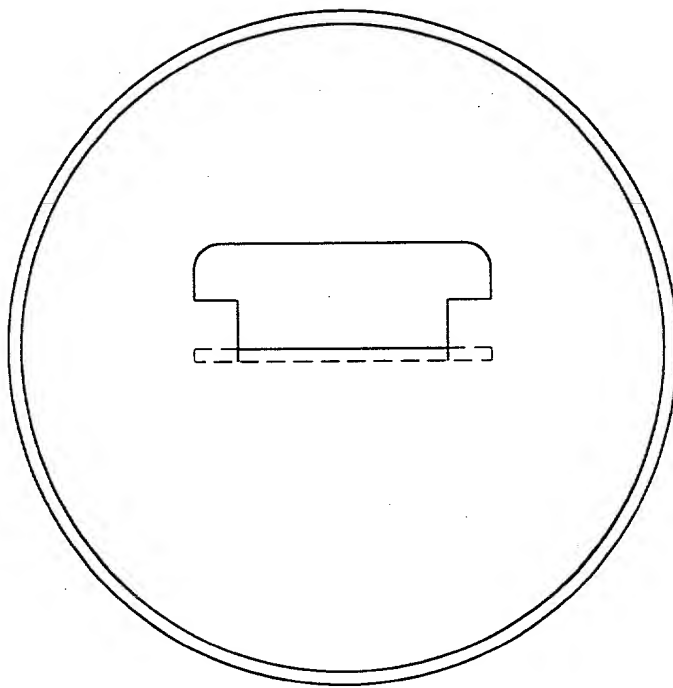


FIG. 19

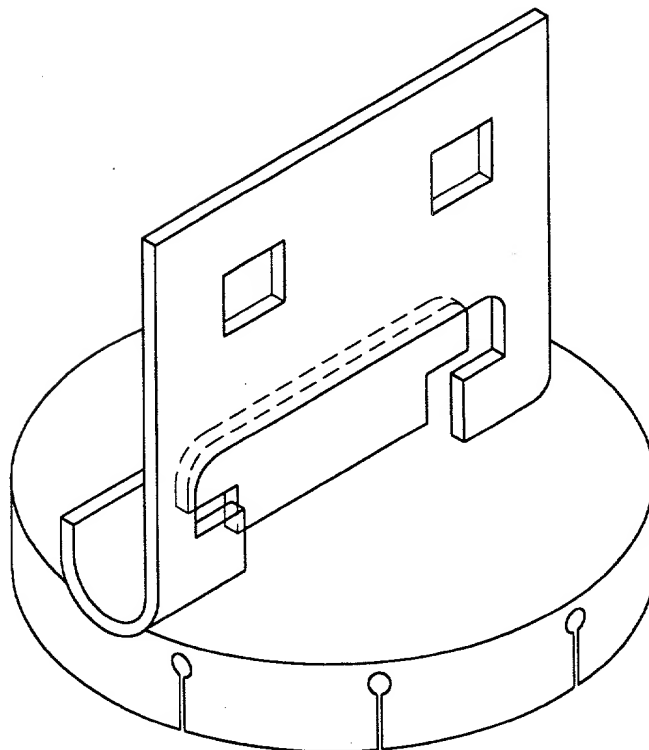


FIG. 20

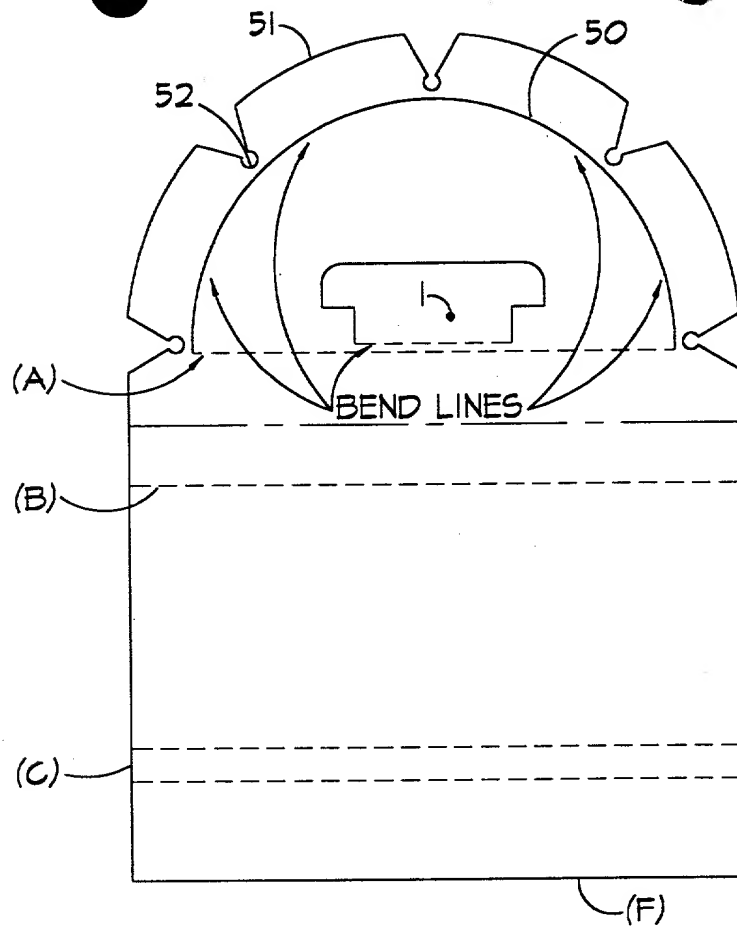


FIG. 21

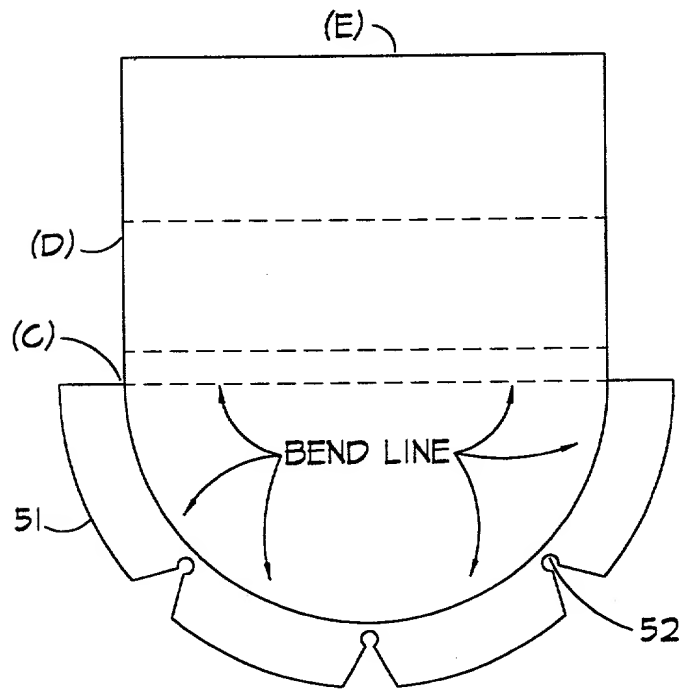


FIG. 22

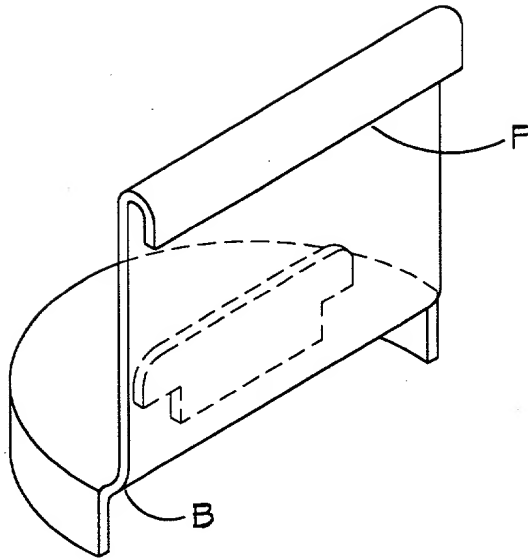


FIG. 23

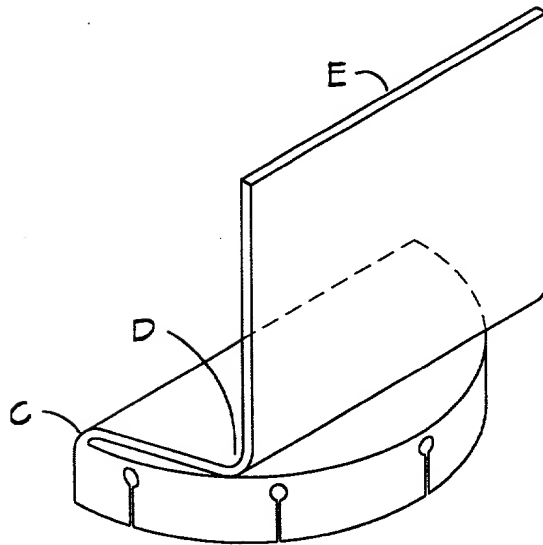


FIG. 24

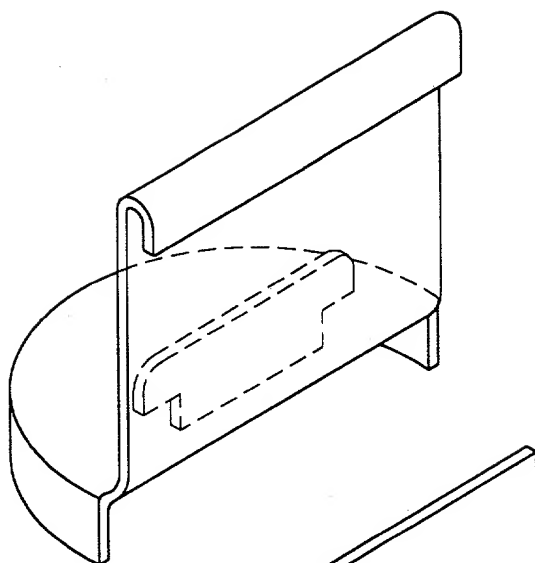


FIG. 23A

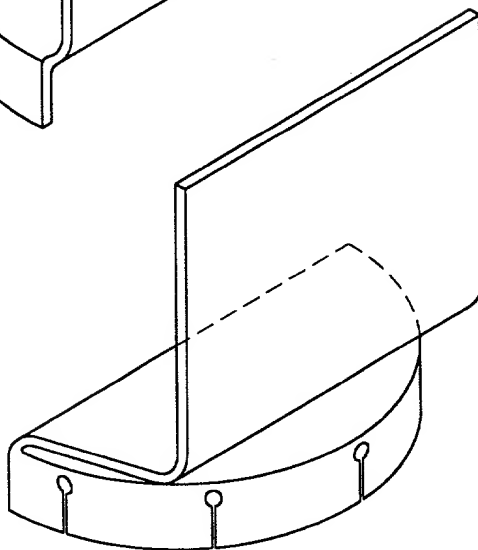


FIG. 24A

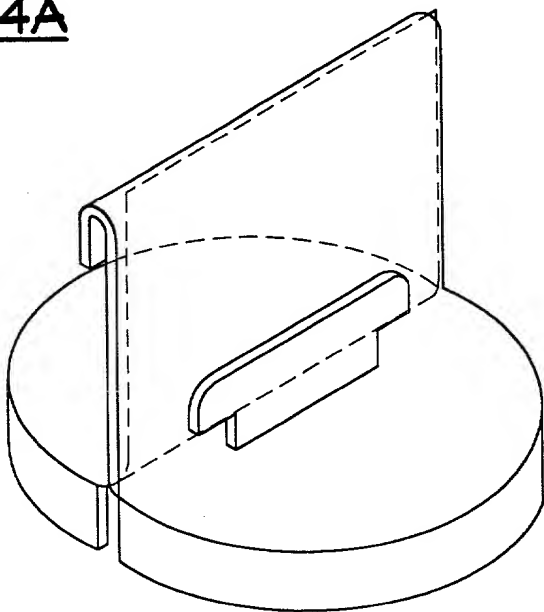


FIG. 24B

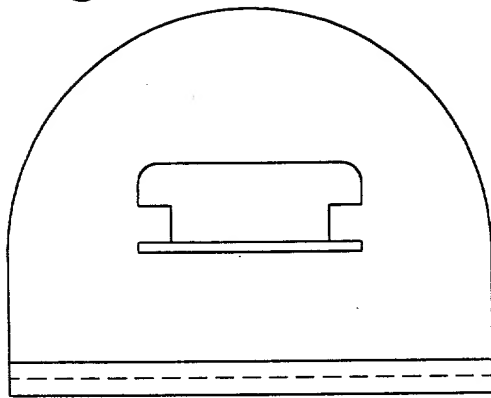


FIG. 25A

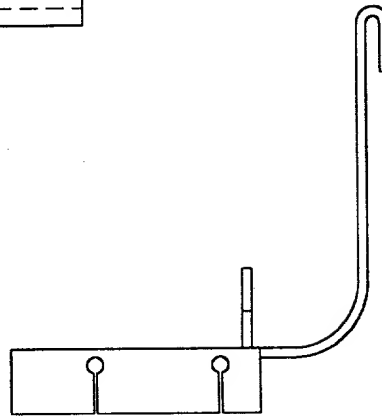


FIG. 25

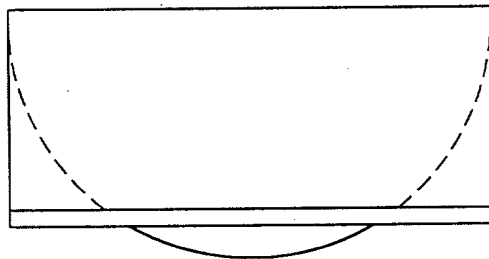


FIG. 26A

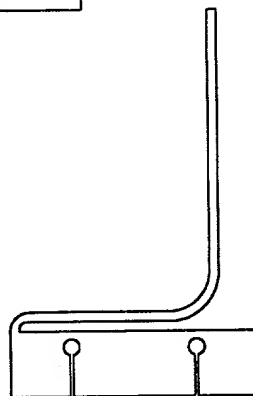


FIG. 26

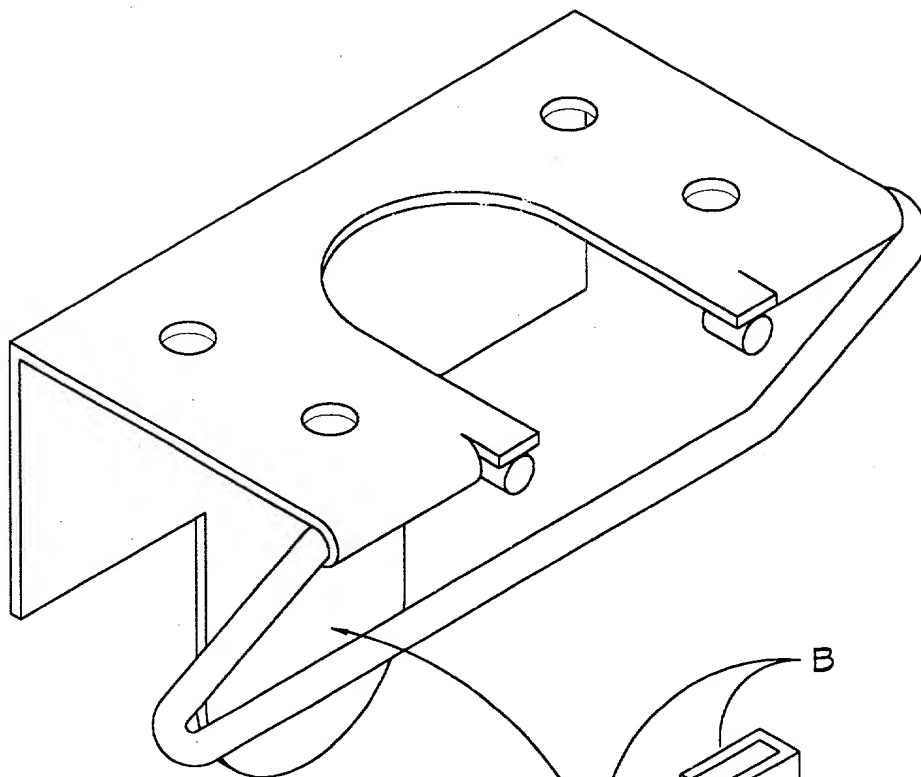


FIG. 27

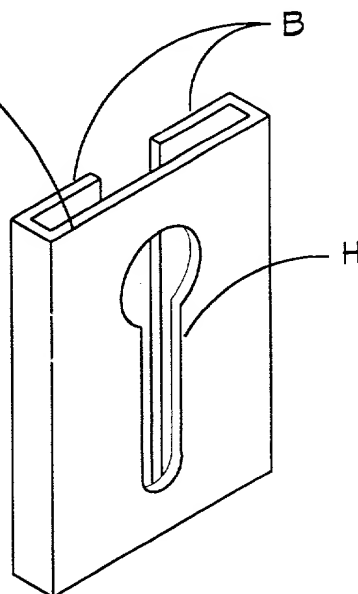


FIG. 27A

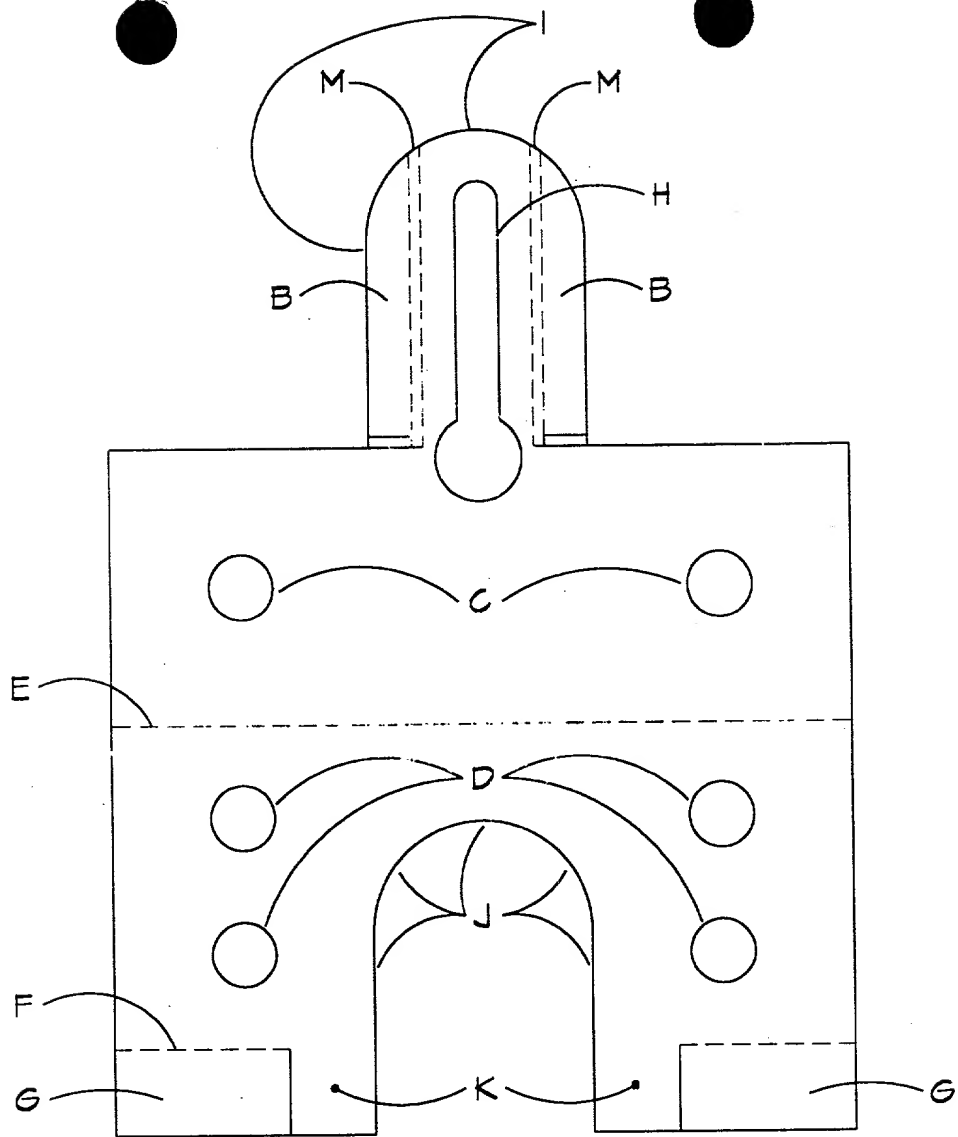


FIG. 28

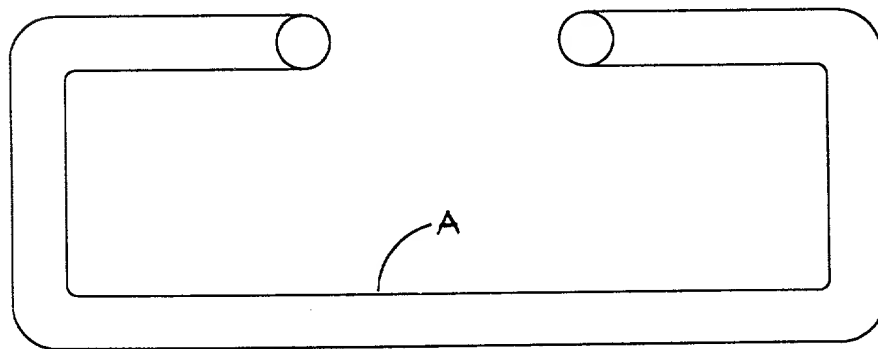


FIG. 29

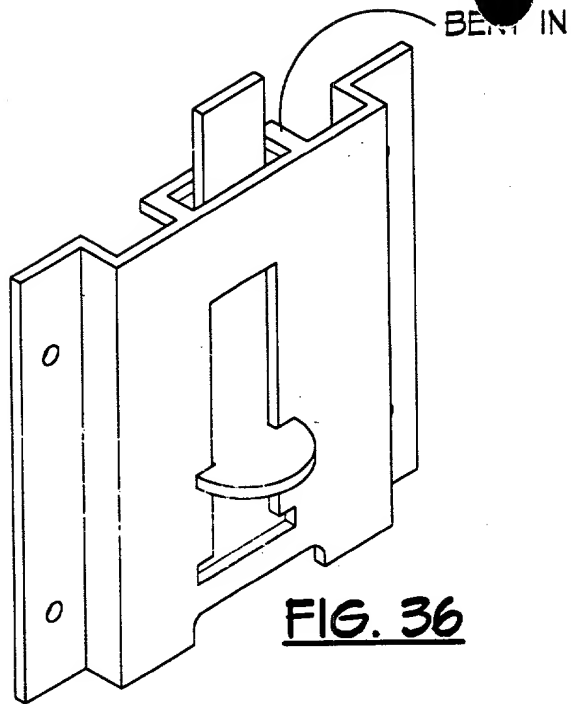


FIG. 36

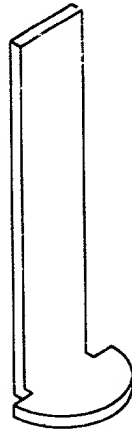


FIG. 36A

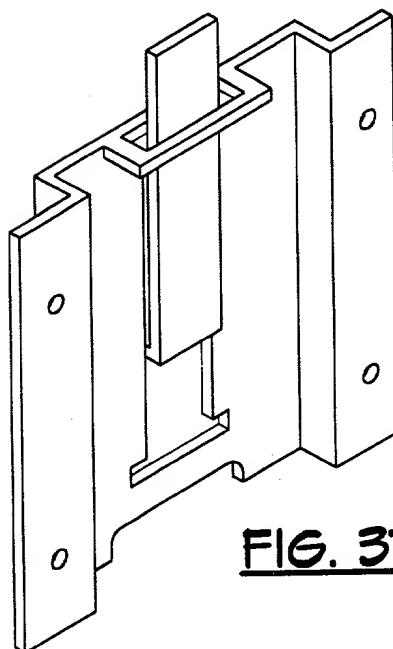


FIG. 37

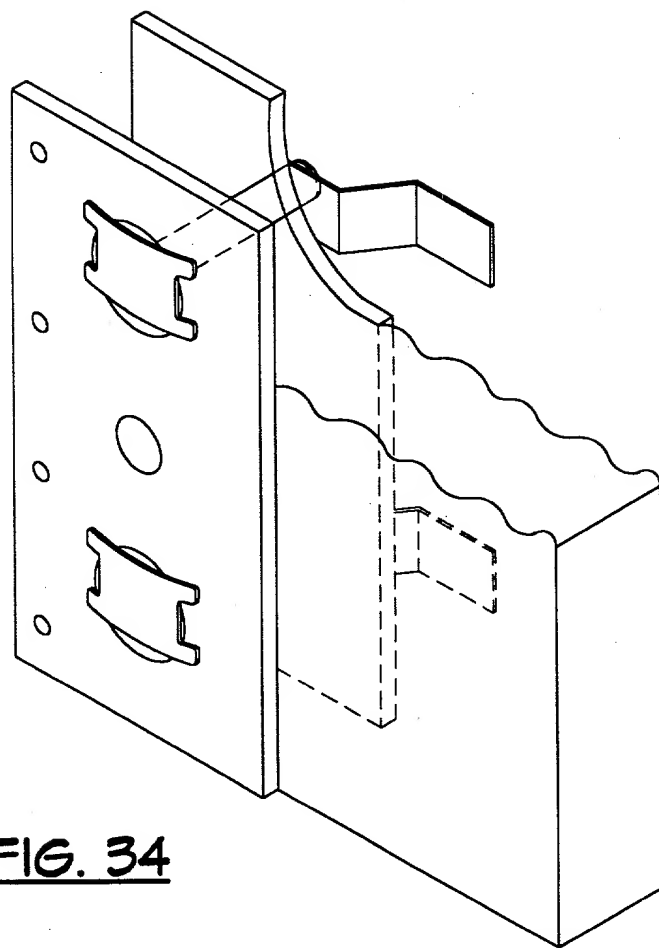


FIG. 34

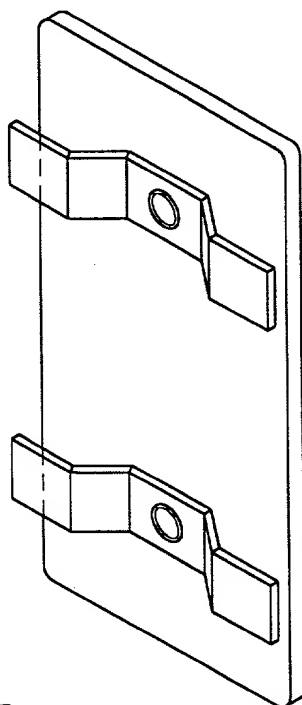


FIG. 35

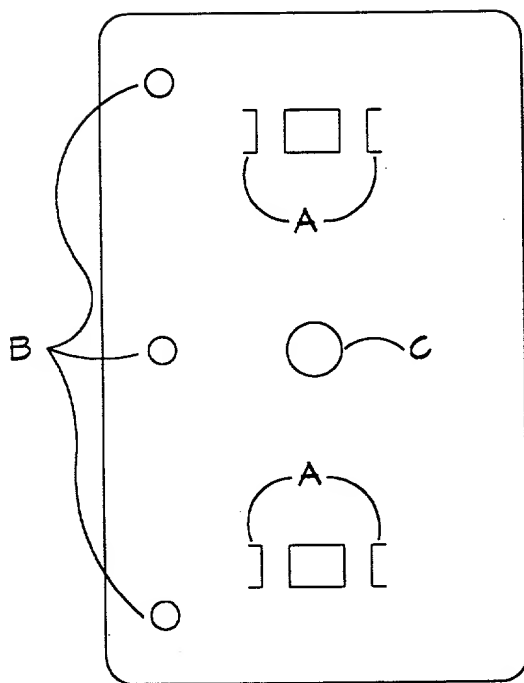


FIG. 30




FIG. 32



FIG. 33A




FIG. 33

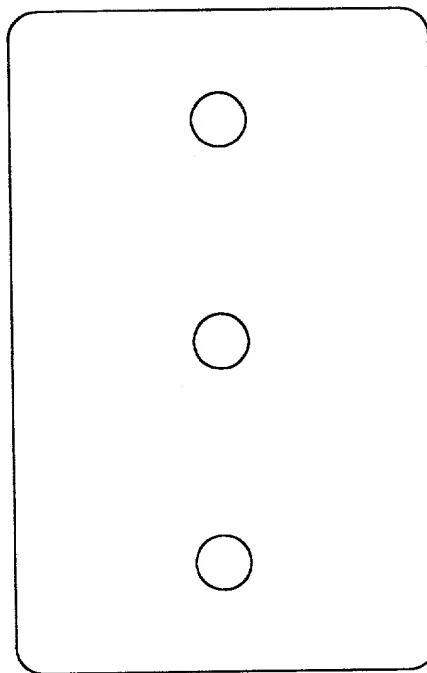


FIG. 31

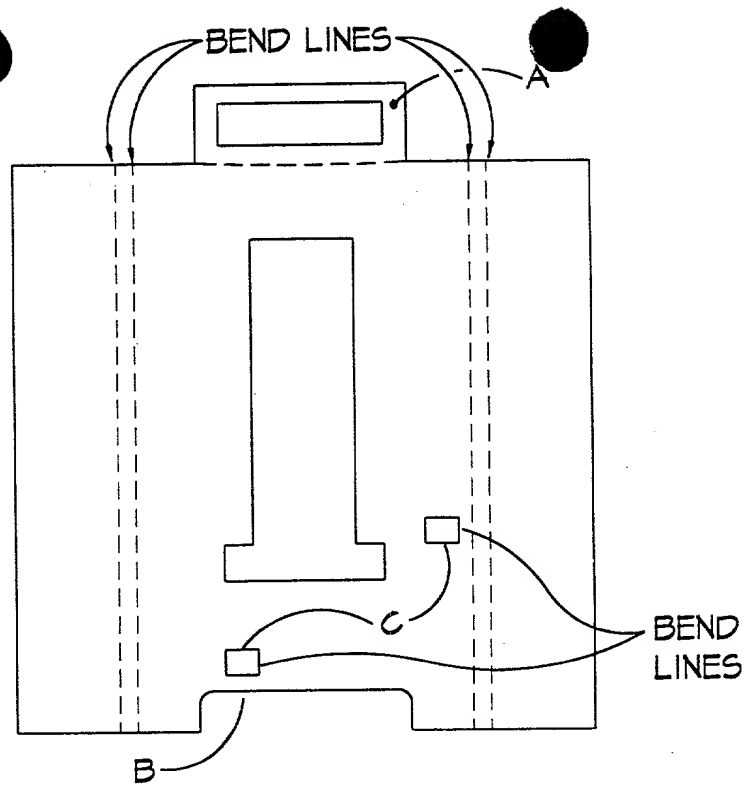


FIG. 38

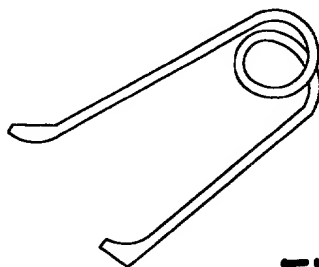


FIG. 39




FIG. 40

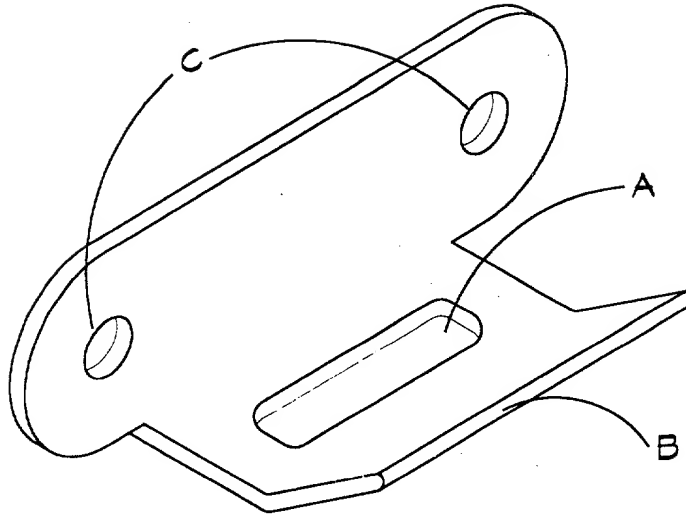


FIG. 41

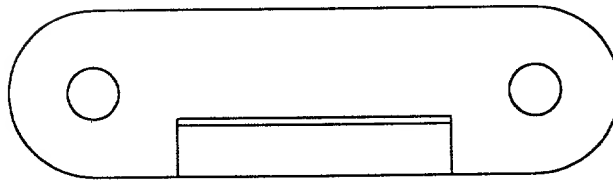


FIG. 42

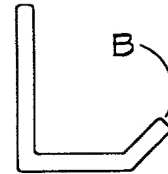


FIG. 43



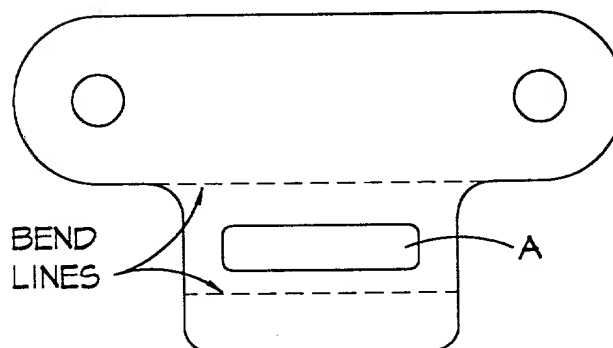


FIG. 44

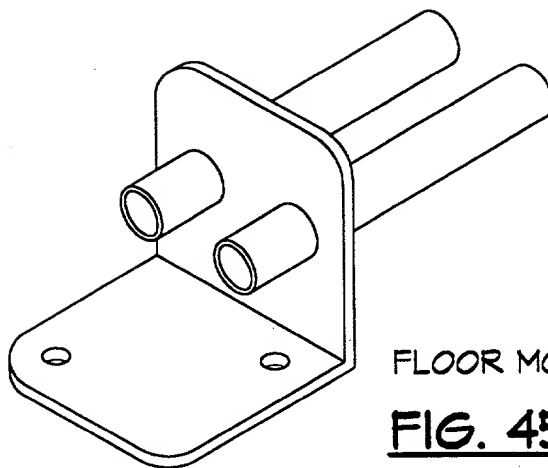


FLOOR MOUNT

FIG. 45

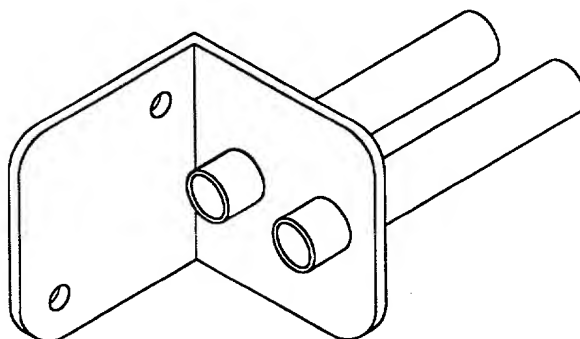

WALL MOUNT

FIG. 46

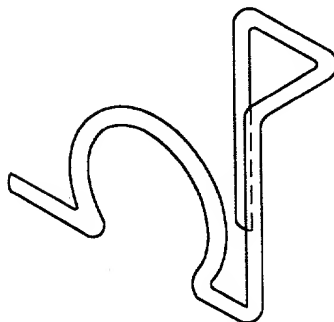

SAFETY PIN

FIG. 46A

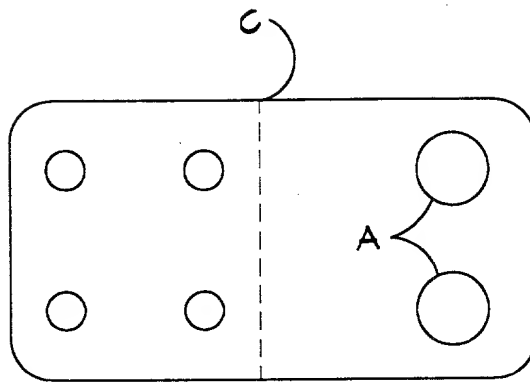


FIG. 45A

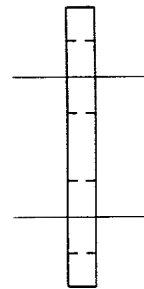


FIG. 45B

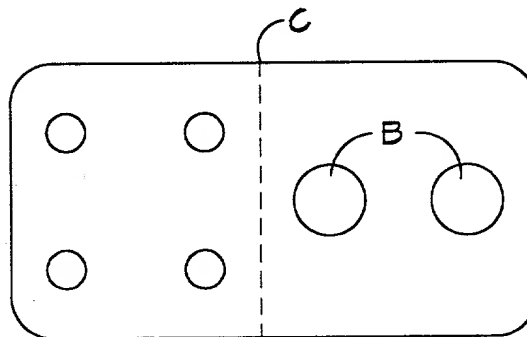


FIG. 46A

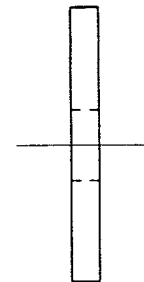


FIG. 46B

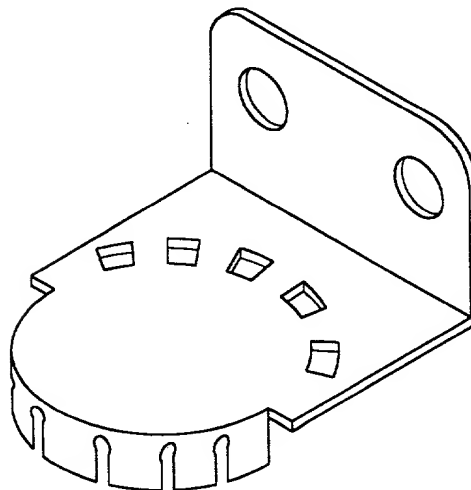


FIG. 47D

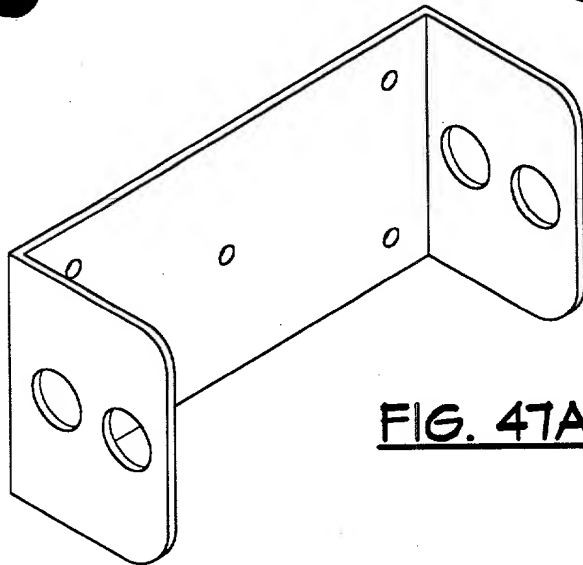


FIG. 47A

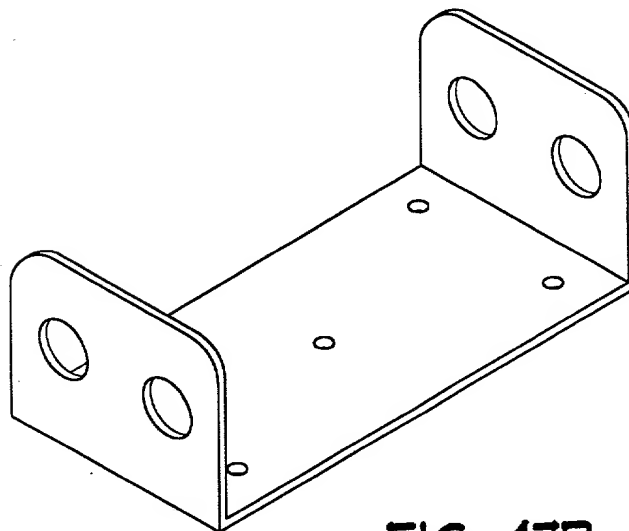


FIG. 47B

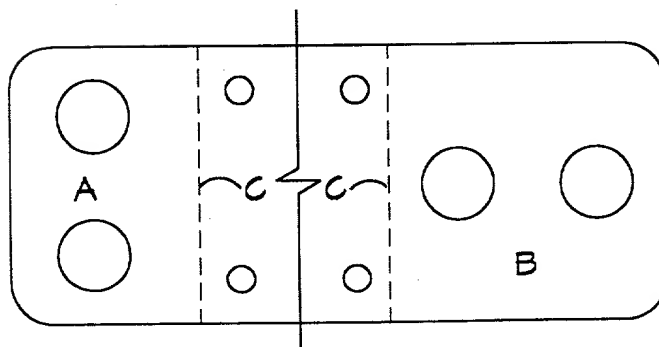


FIG. 47C

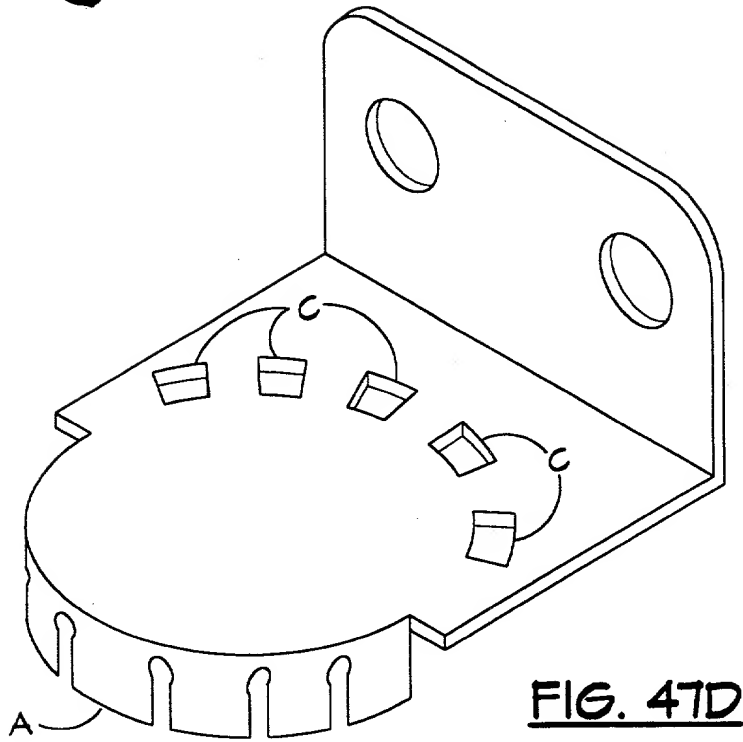


FIG. 47D

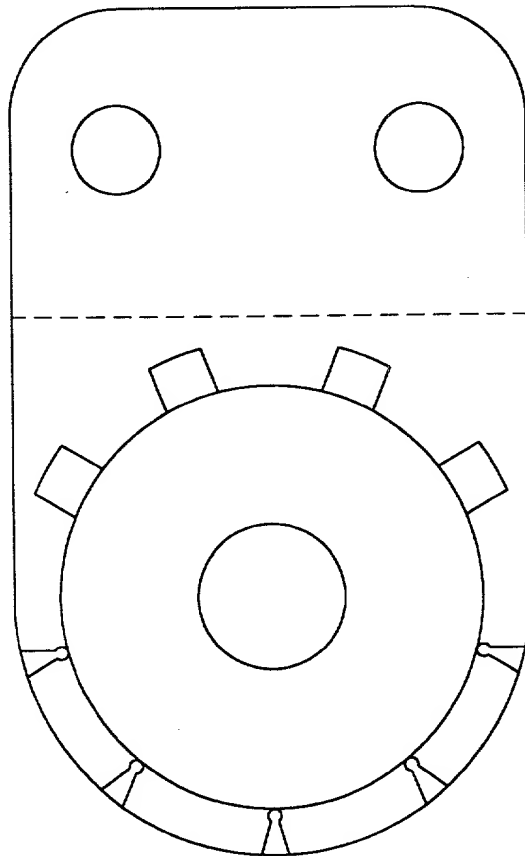


FIG. 47E

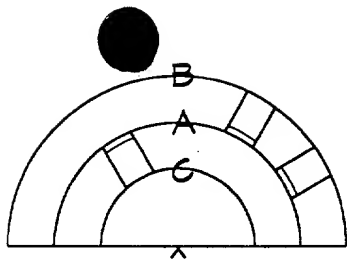


FIG. 47E

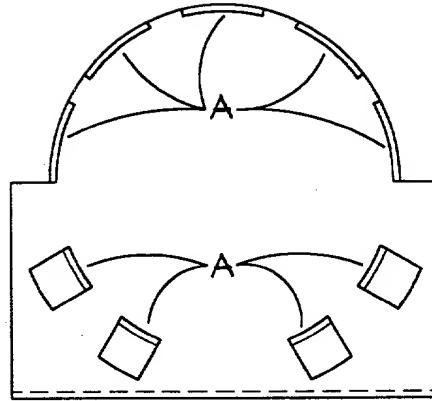


FIG. 47F

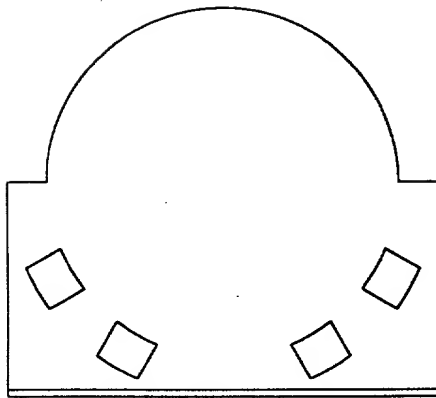


FIG. 47G

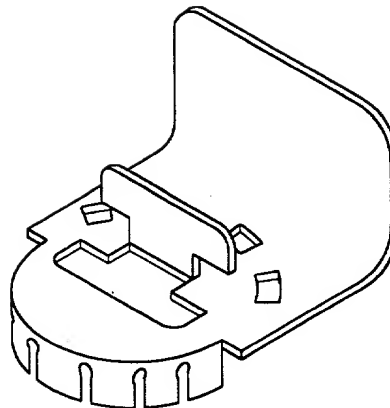


FIG. 47H

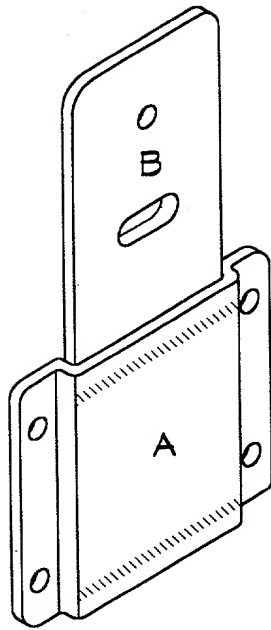


FIG. 48

FIG. 49

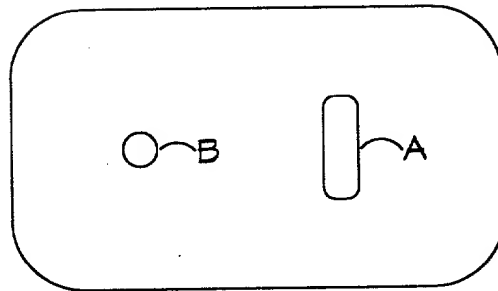


FIG. 50

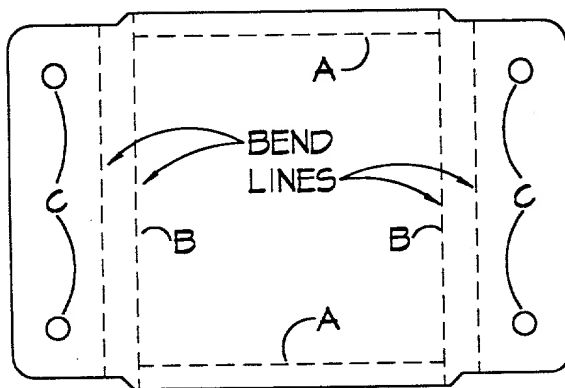


FIG. 51




FIG. 52



FIG. 52A

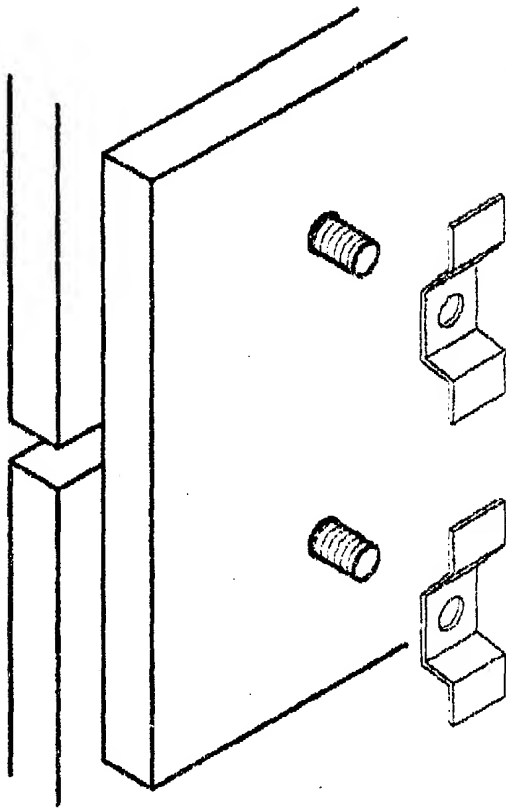


FIG. 46A

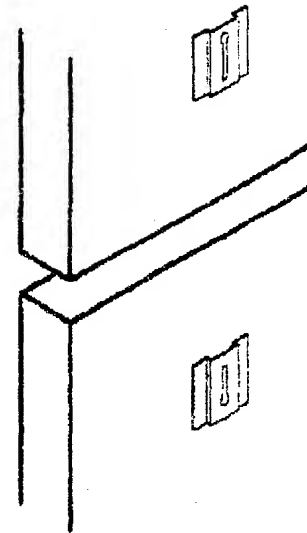


FIG. 46B

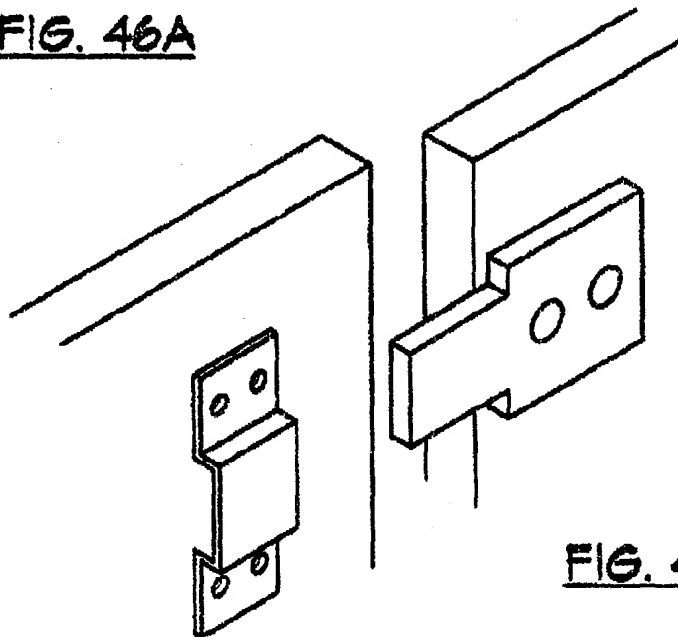


FIG. 46C

In the United States Patent and Trademark Office

First/Sole Applicant: THOMAS C. THOMPSON

Joint/Second Applicant: _____

Title: "HURRICANE AND STORM PROTECTION FOR LARGE
WINDOWS AND DOORS"

Small Entity Declaration—Independent Inventor(s)

As a below-named inventor, I hereby declare that I qualify as an independent inventor as defined in 37 CFR 1.9(c) for purposes of paying reduced fees under Section 41(a) and (b) of Title 35 United States Code, to the Patent and Trademark Office with regard to my above-identified invention described in the specification filed herewith. I have not assigned, granted, conveyed, or licensed—and am under no obligation under any contract or law to assign, grant, convey, or license—any rights in the invention to either (a) any person who could not be classified as an independent inventor under 37 CFR 1.9(c) if that person had made the invention, or (b) any concern which would not qualify as either (i) a small business concern under 37 CFR 1.9(d) or (ii) a nonprofit organization under 37 CFR 1.9(e).

Each person, concern, or organization to which I have assigned, granted, conveyed, or licensed—or am under an obligation under contract or law to assign, grant, convey, or license—any rights in the invention is listed below:

☒ There is no such person, concern, or organization.

☐ Any applicable person, concern, or organization is listed below: *

Full Name: THOMAS C THOMPSON

Address: 92-543 KOKOLE PL
MAKAKILO, HAWAII 96707

I acknowledge a duty to file, in the above application for patent, notification of any change in status resulting in loss of entitlement to small entity status prior to paying, or at the time of paying, the earliest of the issue fee or any maintenance fee due after the date on which status as a small entity is no longer appropriate (37 CFR 1.28(b)).

I hereby declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true; and further that these statements were made with the knowledge that willful false statements and the like so made are punishable by fine or imprisonment or both, under Section 1001 of Title 18 of the United States Code, and that such willful false statements may jeopardize the validity of the application, any patent issuing thereon, or any patent to which this verified statement is directed.

Thomas C. Thompson
Signature of Sole/First Inventor

THOMAS C. THOMPSON
Print Name of Sole/First Inventor

OCT 16, 2000
Date of Signature

Signature of Joint/Second Inventor

Print Name of Joint/Second Inventor

Date of Signature

*Note: A separate Small Entity Statement is required from any listed entity.

Declaration for Utility or Design Patent Application

As a below-named inventor, I hereby declare that my residence, post office address, and citizenship are as stated below next to my name and that I believe that I am the original, first, and sole inventor [if only one name is listed below] or an original, first, and joint inventor [if plural names are listed below] of the subject matter which is claimed and for which a patent is sought on the invention, the specification of which is attached hereto and which has the following title:

Hurricane & Storm Protection for large windows & doors

I have reviewed and understand the contents of the above-identified specification, including the claims, as amended by any amendment specifically referred to in the oath or declaration. I acknowledge a duty to disclose information which is material to the examination of this application in accordance with Title 37, Code of Federal Regulations, Section 1.56(a).

I hereby declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true; and further that these statements were made with the knowledge that willful false statements and the like so made are punishable by fine or imprisonment, or both, under Title 18, United States Code, Section 1001, and that such willful false statements may jeopardize the validity of the application or any patent issued thereon.

Please send correspondence and make telephone calls to the First Inventor below.

Signature: Sole/First Inventor: _____

Thomas C. Thompson ✓

Print Name: _____

THOMAS C. THOMPSON

Date: _____

OCT 16, 2000

Legal Residence: *

92-543 KOKOLE PL

Citizen of: _____

U.S.A

Post Office Address: _____

MAIKAKILO, HAWAII

96707

Telephone: _____

808 672-3107

Signature: Joint/Second Inventor: _____

Print Name: _____

Date: _____

Legal Residence: *

Citizen of: _____

Post Office Address: _____

Telephone: _____

* City and state, county and state or city, state and country, if foreign.